

DIGITAL CAMERA

COOLPIX L24 User's Manual





Trademark Information

- Microsoft, Windows and Windows Vista are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.
- Macintosh, Mac OS, and QuickTime are trademarks of Apple Inc.
- Adobe and Acrobat are registered trademarks of Adobe Systems Inc.
- SDXC, SDHC and SD Logos are trademarks of SD-3C, LLC.
- PictBridge is a trademark.
- All other trade names mentioned in this manual or the other documentation provided with your Nikon product are trademarks or registered trademarks of their respective holders.

Introduction		
First Steps		
ď	Basic Photography and Playback: Easy Auto Mode	
۵	Shooting in the Auto Mode	
SCENE	Shooting Suited for the Scene	
ខ	Taking Pictures of Smiling Faces (Smart Portrait Mode)	
▶	More on Playback	
県	Movies	
Connecting to Televisions, Computers and Printers		
MENU	Shooting, Playback and Setup Menus	
Technical Notes		

For Your Safety

To prevent damage to your Nikon product or injury to yourself or to others, read the following safety precautions in their entirety before using this equipment. Keep these safety instructions where all those who use the product will read them. The consequences that could result from failure to observe the precautions listed in this section are indicated by the following symbol:



This icon marks warnings, information that should be read before using this Nikon product, to prevent possible injury.

WARNINGS



★ Turn off in the event of malfunction

Should you notice smoke or an unusual smell coming from the camera or AC adapter, unplug the AC adapter and remove the batteries immediately, taking care to avoid burns. Continued operation could result in injury. After removing or disconnecting the power source, take the equipment to a Nikonauthorized service representative for inspection.



♠ Do not disassemble

Touching the internal parts of the camera or AC adapter could result in injury. Repairs should be performed only by qualified technicians. Should the camera or AC adapter break open as the result of a fall or other accident. take the product to a Nikon-authorized service representative for inspection, after unplugging the product and/or removing the batteries.



♠ Do not use the camera or AC adapter in the presence of flammable gas

Do not use electronic equipment in the presence of flammable gas, as this could result in explosion or fire.

Mandle the camera strap with care

Never place the strap around the neck of an infant or child



★ Keep out of reach of children

Particular care should be taken to prevent infants from putting the batteries or other small parts into their mouths

♠ Observe caution when handling batteries

Batteries may leak or explode if improperly handled. Observe the following precautions when handling batteries for use in this product:

- Before replacing the batteries, turn the product off. If you are using an AC adapter, be sure it is unplugged.
- Use only the batteries approved for use in this product (\square 12). Do not combine old and new batteries or batteries of different makes or types.
- If Nikon rechargeable Ni-MH batteries FN-MH2 (FN-MH2-B2 or FN-MH2-B4) are purchased separately, charge and use each of them as a set. Do not combine batteries from different pairs.
- The EN-MH2 rechargeable batteries are for use with Nikon digital cameras only, and are compatible with COOLPIX L24.
 - Do not use EN-MH2 rechargeable batteries with incompatible devices.
- Insert batteries in the correct orientation
- Do not short or disassemble batteries or attempt to remove or break battery insulation or casing.
- Do not expose batteries to flame or to excessive heat.
- Do not immerse in or expose to water.
- Do not transport or store with metal objects such as necklaces or hairpins.
- Batteries are prone to leakage when fully discharged. To avoid damage to the product, be sure to remove the batteries when no charge remains.

- Discontinue use immediately should you notice any change in the batteries, such as discoloration or deformation.
- If liquid from damaged batteries comes in contact with clothing or skin, rinse immediately with plenty of water.

♠ Observe the following precautions when handling the **Battery Chargers (available** separately)

- Keep Dry. Failure to observe this precaution could result in fire or electric shock
- Dust on or near the metal parts of the plug should be removed with a dry cloth. Continued use could result in fire
- Do not handle the power cable or go near the battery charger during lightning storms. Failure to observe this precaution could result in electric shock.
- · Do not damage, modify, forcibly tug or bend the power cable, place it under heavy objects, or expose it to heat or flame. Should the insulation be damaged and the wires become exposed, take it to a Nikonauthorized service representative for inspection. Failure to observe these precautions could result in fire or electric shock.
- Do not handle the plug or battery charger with wet hands. Failure to observe this precaution could result in electric shock

For Your Safety

 Do not use with travel converters or adapters designed to convert from one voltage to another or with DC-to-AC inverters. Failure to observe this precaution could damage the product or result in overheating or fire.

⚠ Use appropriate cables

When connecting cables to the input and output jacks, use only the cables provided or sold by Nikon for the purpose, to maintain compliance with product regulations.

★ Handle moving parts with care

Be careful that your fingers or other objects are not pinched by the lens cover or other moving parts.

CD-ROMs

The CD-ROMs supplied with this device should not be played back on audio CD equipment. Playing CD-ROMs on an audio CD player could cause hearing loss or damage the equipment.

Observe caution when using the flash

Using the flash close to your subject's eyes could cause temporary visual impairment. Particular care should be observed if photographing infants, when the flash should be no less than 1 m (3 ft. 4 in.) from the subject.

Do not operate the flash with the flash window touching a person or object

Failure to observe this precaution could result in burns or fire.

Avoid contact with liquid crystal

Should the monitor break, care should be taken to avoid injury caused by broken glass and to prevent liquid crystal from the monitor touching the skin or entering the eyes or mouth.

Turn the power off when using inside an airplane or the hospital

Turn the power off while inside the airplane during take off or landing. Follow the instructions of the hospital when using while in a hospital. The electromagnetic waves given out by this camera may disrupt the electronic systems of the airplane or the instruments of the hospital.

Notices

Notice for Customers in the U.S.A.

Federal Communications Commission (FCC) Radio Frequency Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/television technician for help.



CAUTIONS

Modifications

The FCC requires the user to be notified that any changes or modifications made to this device that are not expressly approved by Nikon Corporation may void the user's authority to operate the equipment.

Interface Cables

Use the interface cables sold or provided by Nikon for your equipment. Using other interface cables may exceed the limits of Class B Part 15 of the FCC rules

Notice for customers in the State of California

WARNING

Handling the cord on this product will expose you to lead, a chemical known to the State of California to cause birth defects or other reproductive harm.

Wash hands after handling.

Nikon Inc...

1300 Walt Whitman Road Melville, New York 11747-3064 USA

Tel: 631-547-4200

Notice for customers in Canada

CAUTION

This Class B digital apparatus complies with Canadian ICFS-003.

ATTENTION

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada

Symbol for Separate Collection in European Countries

This symbol indicates that this product is to be collected separately.



The following apply only to users in European countries:

- This product is designated for separate collection at an appropriate collection point. Do not dispose of as household waste.
- For more information, contact the retailer or the local authorities in charge of waste management.

This symbol on the battery indicates that the battery is to be collected separately.



The following apply only to users in European countries:

- All batteries, whether marked with this symbol or not, are designated for separate collection at an appropriate collection point. Do not dispose of as household waste.
- For more information, contact the retailer or the local authorities in charge of waste management.

Table of Contents

For Your Safety	i
WARNINGS	i
Notices	٠١
Introduction	1
About This Manual	1
Information and Precautions	
Parts of the Camera	4
The Camera Body	
The Monitor	6
Basic Operations	8
(shooting mode) Button	
(playback) Button	
The Multi Selector	9
MENU Button	10
Switching Between Tabs	10
Help Displays	11
About the Shutter-release Button	11
Attaching the Camera Strap	11
First Steps	12
Inserting the Batteries	12
Applicable Batteries	12
Turning On and Off the Camera	12
Setting Display Language, Date and Time	14
Inserting Memory Cards	16
Removing Memory Cards	17
Basic Photography and Playback: Easy Auto Mode	18
Step 1 Turn the Camera On and Select 🗗 (Easy Auto) Mode	18
Indicators Displayed in 🏅 (Easy Auto) Mode	
Step 2 Frame a Picture	
Using the Zoom	
Step 3 Focus and Shoot	
Step 4 Viewing and Deleting Pictures	24
Viewing Pictures (Playback Mode)	
Deleting Pictures	24
Fasy auto mode	26

Table of Contents

▲ Auto Mode	27
Shooting in the Auto Mode	27
Using the Flash	28
Taking Pictures with the Self-timer	30
Macro Mode	31
Exposure Compensation	
Shooting Suited for the Scene	
Using the Scene Mode	33
Setting the Scene Mode	33
Features	34
Taking Pictures for Food Mode	41
Taking Pictures for a Panorama	42
☑ Taking Pictures of Smiling Faces (Smart Portrait Mode)	44
Using Smart Portrait Mode	
► More on Playback	
Viewing Multiple Pictures: Thumbnail Playback	46
Calendar Display	
Taking a Closer Look: Playback Zoom	48
Editing Pictures	
Enhancing Brightness and Contrast: D-Lighting	
Resizing Pictures: Small Picture	51
Creating a Cropped Copy: Crop	52
県 Movies	53
Recording Movies	53
The Movie Menu	
록 Selecting Movie Options	
Movie Playback	
Deleting Movie Files	

Connecting to Televisions, Computers and Printers	56
Connecting to a TV	56
Connecting to a Computer	
Before Connecting the Camera	57
Transferring Images from a Camera to a Computer	58
Connecting to a Printer	62
Connecting the Camera and Printer	63
Printing Pictures One at a Time	64
Printing Multiple Pictures	65
Creating a DPOF Print Order: Print Set	68
MENU Shooting, Playback and Setup Menus	70
Shooting Options: The Shooting Menu	70
Displaying the Shooting Menu	71
# Image mode	
₩B White Balance	
Continuous	76
Ø Color Options	77
Camera Settings that Cannot Be Set at the Same Time	78
Playback Options: The Playback Menu	79
Displaying the Playback Menu	79
Slide Show	
७ Delete	82

Table of Contents

Basic Camera Setup: The Setup Menu	83
Displaying the Setup Menu	84
Menus	85
₩ Welcome Screen	86
Date	87
Monitor Settings	90
Date Imprint	92
💕 Electronic VR	93
🔊 Motion Detection	
AF Assist	95
Sound Settings	96
Auto Off	97
R Format Memory/ Format CardCard	98
L anguage	99
VIDEO Video Mode	99
🔁 Blink Warning	100
Reset All	101
🖁 Battery Type	103
On Protect	104
🗗 Rotate Image	105
聞 Copy	106
Vet Firmware Version	107
Technical Notes	108
Optional Accessories	108
Approved Memory Cards	109
Image File and Folder Names	110
Caring for the Camera	111
Cleaning	113
Storage	114
Error Messages	115
Troubleshooting	118
Specifications	123
Supported Standards	126
Index	127

About This Manual

Thank you for your purchase of a Nikon COOLPIX L24 digital camera. This manual was written to help you enjoy taking pictures with your Nikon digital camera. Read this manual thoroughly before use, and keep it where all those who use the product will read it.

Symbols and Conventions

To make it easier to find the information you need, the following symbols and conventions are used:



This icon marks cautions information that should be read before use, to prevent damage to the camera.



This icon marks tips, additional information that may be helpful when using the camera.



This icon marks notes, information that should be read before using the camera.



This icon indicates that more information is available elsewhere in this manual or in the Ouick Start Guide

Notations

- Secure Digital (SD) memory card, SDHC memory card, and SDXC memory card are referred to as "memory card."
- The setting at the time of purchase is referred to as the "default setting."
- The names of menu items displayed in the camera monitor, and the names of buttons or messages displayed in the computer monitor appear in bold.

Screen Samples

In this manual, images are sometimes omitted from monitor display samples so that monitor indicators can be more clearly shown.

Illustrations and Screen Display

Illustrations and text displays shown in this manual may differ from actual appearance or display.



Memory Cards

Pictures taken with this camera can be stored in the camera's internal memory or on removable memory cards. If a memory card is inserted, all new pictures will be stored on the memory card and delete, playback and format operations will apply only to the pictures on the memory card. The memory card must be removed before the internal memory can be formatted or used to store, delete or view pictures.

Information and Precautions

Life-Long Learning

As part of Nikon's "Life-Long Learning" commitment to ongoing product support and education, continually updated information is available online at the following sites:

- For users in the U.S.A.: http://www.nikonusa.com/
- For users in Europe and Africa: http://www.europe-nikon.com/support/
- For users in Asia, Oceania, and the Middle East: http://www.nikon-asia.com/

Visit these sites to keep up-to-date with the latest product information, tips, answers to frequently asked questions (FAQs), and general advice on digital imaging and photography. Additional information may be available from the Nikon representative in your area. See the URL below for contact information:

http://imaaina.nikon.com/

Use Only Nikon Brand Electronic Accessories

Nikon COOLPIX cameras are designed to the highest standards and include complex electronic circuitry. Only Nikon brand electronic accessories (including battery chargers, batteries and AC adapters) certified by Nikon specifically for use with this Nikon digital camera are engineered and proven to operate within the operational and safety requirements of this electronic circuitry.

The use of non-Nikon electronic accessories could damage the camera and may void your Nikon warranty.

For more information about Nikon brand accessories, contact a local authorized Nikon dealer.

Before Taking Important Pictures

Before taking pictures on important occasions (such as at weddings or before taking the camera on a trip), take a test shot to ensure that the camera is functioning normally. Nikon will not be held liable for damages or lost profits that may result from product malfunction.

About the Manuals

- No part of the manuals included with this product may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language in any form, by any means, without Nikon's prior written permission.
- Nikon reserves the right to change the specifications of the hardware and software described in these manuals at any time and without prior notice.
- Nikon will not be held liable for any damages resulting from the use of this product.
- While every effort was made to ensure that the information in these manuals is accurate and complete, we would appreciate it were you to bring any errors or omissions to the attention of the Nikon representative in your area (address provided separately).

Notice Concerning Prohibition of Copying or Reproduction

Note that simply being in possession of material that was digitally copied or reproduced by means of a scanner, digital camera or other device may be punishable by law.

· Items prohibited by law from being copied or reproduced

Do not copy or reproduce paper money, coins, securities, government bonds or local government bonds, even if such copies or reproductions are stamped "Sample". The copying or reproduction of paper money, coins, or securities which are circulated in a foreign country is prohibited. Unless the prior permission of the government was obtained, the copying or reproduction of unused postage stamps or post cards issued by the government is prohibited. The copying or reproduction of stamps issued by the government and of certified documents stipulated by law is prohibited.

· Cautions on certain copies and reproductions

The government has issued cautions on copies or reproductions of securities issued by private companies (shares, bills, checks, gift certificates, etc.), commuter passes or coupon tickets, except when a minimum of necessary copies are to be provided for business use by a company. Also, do not copy or reproduce passports issued by the government, licenses issued by public agencies and private groups, ID cards and tickets, such as passes and meal coupons.

· Comply with copyright notices

The copying or reproduction of copyrighted creative works such as books, music, paintings, woodcut prints, maps, drawings, movies and photographs is governed by national and international copyright laws. Do not use this product for the purpose of making illegal copies or to infringe copyright laws.


Disposing of Data Storage Devices

Please note that deleting images or formatting data storage devices such as memory cards or builtin camera memory does not completely erase the original image data. Deleted files can sometimes be recovered from discarded storage devices using commercially available software, potentially resulting in the malicious use of personal image data. Ensuring the privacy of such data is the user's responsibility.

Before discarding a data storage device or transferring ownership to another person, erase all data using commercial deletion software, or format the device and then completely refill it with images containing no private information (for example, pictures of empty sky). Be sure to also replace any pictures selected for the welcome screen (86). Care should be taken to avoid injury or damage to property when physically destroying data storage devices.


Parts of the Camera

The Camera Body

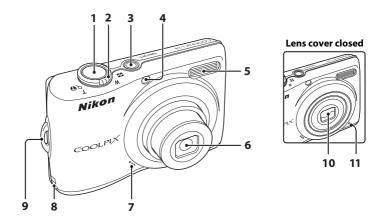

1	Shutter-release button2	
2	Zoom control 2 W : wide 2 T : tele 2 E : Thumbnail playback 4 Q : playback zoom 4 ② : help 1	
3	Power switch/Power-on lamp 18, 97	
4	Self-timer lamp30 AF-assist illuminator23, 95	

5	Flash28
6	Lens113, 123
7	Speaker55
	Power connector cover (for connecting optional AC adapter)108
9	Eyelet for camera strap11
10	Lens cover111
11	Built-in microphone53

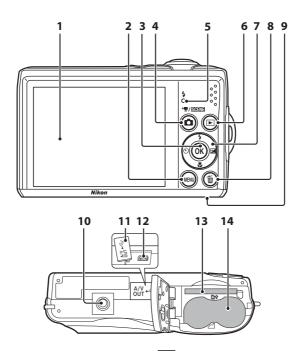

1	Monitor6
2	MENU button10, 54, 71, 79, 84
3	(apply selection) button9
4	(shooting mode) button8
5	Flash lamp29
6	▶ (playback) button8, 24
7	Multi selector9
8	(delete) button24, 25, 55

9	Battery-chamber/ memory card slot cover12, 16
10	Tripod socket
11	Pin cover56, 58, 63
12	USB connector and audio/video output56, 58, 63
13	Memory card slot16
14	Battery-chamber12


The Monitor

The following indicators may appear in the monitor during shooting and playback (actual display varies with current camera settings).

The indicators and photo info displayed during shooting and playback will turn off after a few seconds (\square 90).


ME/MPL_4

Shooting

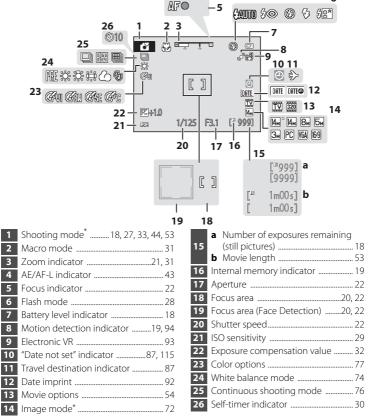

^{*} Differs according to the current shooting mode. Refer to the sections on each mode for details.

Playback

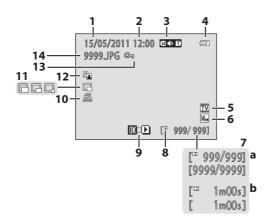

Date of recording14
Time of recording14
Volume55
Battery level indicator18
Movie options*54
Image mode [*] 72
a Current frame number/
total number of frames24 b Movie length55

8	Internal memory indicator24
9	Movie playback indicator55
10	Print-order icon68
11	Small picture51
12	D-Lighting icon50
13	Protect icon104
14	File number and type110

^{*} The displayed icons vary with the settings in shooting mode.

Basic Operations

(shooting mode) Button



When **a** is pressed in playback mode, the camera enters shooting mode.

When \bigcirc is pressed in shooting mode, the shooting-mode selection menu is displayed, which allows you to change the shooting mode.

Shooting-mode Selection Menu

The multi selector (\square 9) can be used to select one of the following shooting modes.



- 1 🗗 Easy auto mode (🕮 18)
- ② **≰** Scene (□ 33)*
- ③ Smart portrait (44)
- ④ ▼ Movie mode (□ 53)
- ⑤ ▲ Auto mode (ДД 27)

When **(**) is pressed while the shooting-mode selection menu is displayed, the camera returns to shooting mode without changing the current shooting mode.

▶ (playback) Button



During shooting mode, the camera enters the playback mode when ightharpoonup is pressed.

If the camera is turned off, hold down **\rightarrow** to turn the camera on in playback mode.

^{*} The displayed icons vary depending on the last mode selected.

The Multi Selector

 
This section describes standard uses of the multi-selector to select modes, select menu options and to apply selection.

Operate the multi selector by pressing it up, down, left, right, and by pressing (8).



For Shooting

Display **\$** (flash mode) menu (QQ 28)/select the item above.






Display (macro mode) menu (31)/select the item below.

For Playback





 For the Menu Screen





Note on the Multi Selector

MENU Button

Press **MENU** to display the menu for the selected mode.

- Use the multi selector to apply settings (9).
- Select a tab on the left side of the monitor to display the corresponding menu.
- To exit the menu display, press **MENU** again.



Upper tab: Menus available for the current mode are displayed.

Lower tab: Display the setup menu.



Displayed when the menu contains two or more pages.

Displayed when there are more previous menu items.

Displayed when there are one or more menu items to follow.



While an item is selected, press (®) or the multi selector ▶ to display that item's options.



Press (R) or the multi selector to apply selection.

Switching Between Tabs



◀ to highlight the tab.

Press the multi selector ▲▼ to select a tab and press (6) or .

The selected menu will be displayed.

When using the following modes, you can display the tabs by pressing the multi selector

✓ while the menu is displayed.

• Easy auto mode, scene mode, smart portrait mode and movie mode

Help Displays

Rotate the zoom control to $\mathbf{T}(\mathbf{Q})$ when \mathbf{P}/\mathbf{Q} is displayed at the lower right of the menu screen to view a description of the currently selected option.

To return to the original menu, rotate the zoom control to **T** (2) again.





About the Shutter-release Button

 
The camera features a two-stage shutter-release button. To set focus and exposure, press the shutter-release button halfway, stopping when you feel resistance. Focus and exposure lock while the shutter-release button is held in this position. To release the shutter and take a picture, press the shutter-release button the rest of the way down. Do not use force when pressing the shutter-release button, as this may result in camera shake and blurred pictures.



Press the shutterrelease button halfway to set focus and exposure.

release button the rest of the way down to take picture.

Attaching the Camera Strap



Inserting the Batteries

 
Open the battery-chamber/memory card slot cover.

Before opening the battery-chamber/memory card slot cover, hold the camera upside down to prevent the batteries from falling out.



2 Inserting the Batteries.

Confirm that the positive (+) and negative (-) terminals are oriented correctly as described on the label at the entrance of the battery chamber, and insert the batteries.



3 Close the battery-chamber/memory card slot cover.

 


Applicable Batteries

- Two LR6/L40 (AA-size) alkaline batteries (batteries supplied)
- Two FR6/L91 (AA-size) lithium batteries
- Two EN-MH2 Ni-MH (nickel metal hydride) rechargeable batteries

Turning On and Off the Camera

Press the power switch to turn on the camera. After the power-on lamp (green) lights for a moment, the monitor turns on. When the camera turns off, both the power-on lamp and monitor will turn off.



Removing the Batteries

Confirm the power-on lamp and the monitor are off and open the battery-chamber/ memory card slot cover.

Additional Precautions Regarding Batteries

- Read and follow the warnings and cautions (iii, 112).
- Be sure to read and follow the warnings for the battery on page iii and the section, "The Battery"
 (112), before using the battery.
- Do not combine old and new batteries or batteries of different makes or types.
- Batteries with the following defects cannot be used:







Batteries with insulation that does not cover the area around the negative terminal.

negative terminal

Notes for EN-MH1 Rechargeable Batteries, MH-70/71 Battery Charger

This camera can also use EN-MH1 Ni-MH rechargeable batteries.

Be sure to read and follow the warnings for the battery found in the section, "The Battery" (112), before using the battery.

B Battery Type

By setting **Battery type** (\square 103) in the setup menu (\square 83) to match the type of batteries inserted in the camera, the batteries can perform more efficiently.

The default setting is the type of battery supplied with purchase. When any other type of battery is used, turn the camera on and change the setting $(\square 103)$.

Alkaline Batteries

Performance of alkaline batteries may vary greatly depending on the manufacturer. Choose a reliable brand.

Alternative Power Sources

To power the camera continuously for extended periods, use an AC Adapter EH-65A (available separately) (108). **Do not, under any circumstances, use another make or model of AC adapter.** Failure to observe this precaution could result in overheating or in damage to the camera.

Auto Power Off in Shooting Mode (Standby Mode)

If no operations are performed for about 30 seconds (default setting), the monitor will turn off automatically and the camera will enter standby mode. After a further three minutes, the Auto off function will turn the camera off automatically.

- While the monitor is off during standby mode (the power-on lamp flashes), it will turn on again
 when the power switch, shutter-release button,
 □ button, or □ button is pressed.
- The time allowed to elapse before the camera enters standby mode can be changed from the Auto off option (\$\sum_{2}\$ 97) in the setup menu (\$\sum_{2}\$ 83).

Setting Display Language, Date and Time

A language-selection dialog is displayed the first time the camera is turned on.

1 Press the power switch to turn on the camera.

The power-on lamp (green) will light for a moment and the monitor will turn on.



2 Use the multi selector to choose the desired language and press **®**.

For information on using the multi selector, see "The Multi Selector" (\square 9).





3 Choose **Yes** and press **®**.

If **No** is selected, the date and time will not be set.



4 Press **◄** or **▶** to select your home time zone (city name) (□ 89) and press **®**.



Daylight Saving Time

To use the camera in an area where daylight saving time is in effect, press \triangle on the home time zone in Step 4 to set the daylight saving time to on.

When the daylight saving time setting is selected, the $\mbox{\ensuremath{\$}}$ mark appears on the top of the monitor. To release the daylight saving time setting, press $\mbox{\ensuremath{$\nabla$}}$.



5 Change the date and time.

Press \triangle or ∇ to edit the highlighted item.

Press ▶ to move the cursor in the following order. **D** ->

M -> **Y** -> Hour -> Minute -> **D M Y**

Press ◀ to return to the previous item.



6 Choose the order in which the day, month and year are displayed and press **®** or **▶**.

The settings are applied.



7 Press **1** to exit the screen.

The shooting-mode selection menu will be displayed.



8 When Easy auto mode is displayed, press **®**.

The camera enters the shooting mode and you can take pictures in Easy auto mode (Ω 18).

Press the multi selector ▲ or ▼ before ♠, to switch to another shooting mode. See "Shooting in the Auto Mode" (☐ 27), "Using the Scene Mode" (☐ 33), "Using Smart Portrait Mode" (☐ 44) or "Recording Movies" (☐ 53) for more information.



Changing the Date and Time, Date Imprint

- To change the date and time, select **Date** from **Date** (\square 87) in the setup menu (\square 83) and follow the instructions starting from the above step 5.
- To change the time zone and the daylight saving settings, select Time zone from Date in the setup menu (\$\subset\$ 87,88).
- To imprint the shooting date into images when taking pictures, make sure the date and time are set, then set **Date imprint** (1 92) in the setup menu.

Inserting Memory Cards

Images are saved in the camera's internal memory (approximately 17 MB) or on removable Secure Digital (SD) memory cards (available separately) (\square 109).

If a memory card is inserted in the camera, pictures are automatically stored on the memory card and pictures recorded to the memory card can be played back, deleted or transferred. Remove the memory card to store pictures in the internal memory, or play back, delete or transfer pictures from the internal memory.

1 Confirm the power-on lamp and the monitor are off and open the battery-chamber/ memory card slot cover.

Be sure to turn off the camera before opening the battery-chamber/memory card slot cover.

Before opening the battery-chamber/memory card slot cover, hold the camera upside down to prevent the batteries from falling out.



2 Insert the memory card.

Slide the memory card in correctly until it clicks into place.

Close the battery-chamber/memory card slot cover.



Inserting Memory Cards

Inserting the memory card upside down or backwards could damage the camera or the memory card. Make sure that the memory card is correctly oriented.




Removing Memory Cards

Before removing memory cards, *turn the camera off* and confirm that the power-on lamp and the monitor are off. Open the battery-chamber/memory card slot cover and press the card in (1) to partially eject the card. Remove the card (2), being careful not to bend it.

Formatting Memory Cards

If the message shown on the right is displayed, the memory card must be formatted before use. **Note that formatting permanently deletes all pictures and other data on the memory card.** Be sure to make copies of any pictures you wish to keep before formatting the memory card.

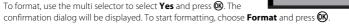

- Do not turn the camera off or open the battery-chamber/memory card slot cover until formatting is complete.
- The first time you insert the memory cards used in other devices into the camera, be sure to format them using this camera (\(\superscript{\superscr

The Write Protect Switch

SD memory cards are equipped with a write protect switch. Pictures cannot be recorded or deleted and the memory card cannot be formatted when this switch is in the "lock" position. Unlock by sliding the switch to the "write" position.

 
Memory Cards

- · Use only Secure Digital memory cards.
- Do not perform the following during formatting, while data
- is being written to or deleted from the memory card, or during data transfer to a computer. Failure to observe this precaution could result in the loss of data or in damage to the camera or memory card:
 - Insert or remove the card
 - Remove the batteries
 - Turn off the camera
 - Disconnect the AC adapter
- Do not format the memory card using a computer.
- · Do not disassemble or modify.
- Do not drop, bend, or expose to water or strong physical shocks.
- Do not touch the metal terminals with your fingers or metal objects.
- · Do not affix labels or stickers to the memory card.
- Do not leave in direct sunlight, closed vehicles or areas exposed to high temperatures.
- Do not expose to humidity, dust, or to corrosive gases.









Step 1 Turn the Camera On and Select 🚨 (Easy Auto) Mode

In (easy auto) mode, the camera automatically determines an appropriate shooting mode when you frame a picture, allowing you to easily take pictures using a shooting mode that suits the scene (\square 26).

1 Press the power switch to turn on the camera.

The power-on lamp (green) will light for a moment and the monitor will turn on. The lens will extend at this time. Easy auto mode is set at the time of purchase. Proceed to step 4.



Press to display the shooting-mode selection menu.



Press the multi selector ▲▼ to choose ☎ and press ௧.

The camera enters 🗳 (easy auto) mode.



4 Check the battery level and number of exposures remaining.

Battery level indicator

Monitor	Description
NO INDICATOR	The battery level is high.
	Batteries low. Prepare to replace batteries.
• Battery exhausted.	Cannot take pictures. Replace with new batteries.





Number of exposures remaining

Number of Exposures Remaining

The number of pictures that can be stored depends on the capacity of the internal memory or memory card and image mode setting $(\square 73)$.

Indicators Displayed in 🗳 (Easy Auto) Mode

Shooting mode

Motion detection indicator Reduce the blurring caused by subject or camera shake.



Internal memory indicator

Pictures will be recorded to internal memory (approximately 17 MB).

When memory card is inserted, \(\bigcirc \) is not displayed and pictures will be recorded to memory card.

Image mode

Display image size and quality set in the image mode menu.

The default setting is 4320×3240 .

The indicators and photo info displayed during shooting and playback will turn off after a few seconds (\square 90).

When the monitor has turned off in standby mode to save power, press the power switch, the shutter-release button, or \bigcirc to reactivate it (\bigcirc 97).

Available Functions in Easy Auto Mode

- When the camera is pointed at a person's face, the camera automatically detects the face and focuses on it (
 22, 26).
- The flash setting can be set to **③** (off) (28).
- The self-timer (30) and exposure compensation (32) are available.
- Image mode (QQ 72) can be changed by pressing MENU.

Motion Detection

See **Motion detection** (94) in the setup menu (83) for more information.

Electronic Vibration Reduction

 
When the flash mode (\square 28) is set to 3 (off) or 4 (slow sync) while **Electronic VR** (\square 93) in the setup menu is set to **Auto**, the 4 icon may be displayed in the monitor. 4 indicates shooting conditions in which the effects of camera shake can be pronounced. In these situations, the camera reduces the effects of camera shake in pictures before saving them.

Step 2 Frame a Picture

1 Ready the camera.

Hold the camera steadily in both hands, keeping your fingers and other objects away from the lens, flash, self-timer lamp and microphone.

When taking pictures in "tall" orientation, turn the camera so that the flash is above the lens



2 Frame the picture.

When the camera determines the scene mode, the shooting mode icon will change (\square 26).

When the camera detects a human face, that face will be framed by a yellow double border.

Up to 12 faces can be recognized. If more than one face is recognized, the face closest to the camera will be framed in the focus area by a double border, and the other faces will be framed by a single border.

Shooting mode icon



When shooting non-human subjects or when no faces are detected, focus will be in the center of the monitor. Position the main subject near the center of the monitor.

Easy Auto Mode

- The desired scene mode may not be selected in certain conditions. In this case, select another shooting mode.
- When digital zoom is in effect, the shooting mode is

Using the Zoom

Use the zoom control to activate optical zoom. Rotate the zoom control to ${\bf T}$ to zoom in on the subject.

Rotate the zoom control to **W** to zoom out.

The zoom indicator is displayed at the top of the monitor when the zoom control is rotated





Digital Zoom

When the camera is zoomed in to the maximum optical zoom position, rotating and holding the zoom control at **T** triggers digital zoom. Digital zoom can magnify the subject up to about 4x beyond the magnification of the optical zoom.

The focus area is not displayed when digital zoom is in effect, and focus will be in the center of the screen



Digital Zoom and Interpolation

Unlike optical zoom, digital zoom uses a digital imaging process known as interpolation to magnify images, resulting in slight deterioration of picture quality.

Interpolation is applied at zoom positions beyond 🕰.

When zoom is increased beyond the \triangle position, interpolation is initiated and the zoom indicator turns yellow to indicate that interpolation is being applied.

The position of Δ moves to the right as image size decreases, allowing for confirmation of the zoom positions at which shooting without interpolation is possible at the current image mode setting.



Step 3 Focus and Shoot

1 Press the shutter-release button halfway.

 
Press halfway (11) to focus. When the subject is in focus, the focus area will glow green.








When a face is detected:



When no faces are detected:



 When using the digital zoom, the camera focuses on the center of the frame, but the focus area is not displayed. When the subject is in focus, the focus indicator (\$\sum_{\text{0}}\$6) will glow green.



The shutter speed and aperture are displayed when the shutter-release button is pressed halfway.

Focus and exposure remain locked while the shutter release button is pressed halfway.

When the camera is unable to focus, the focus area, or focus indicator, blinks red. Change the composition and try pressing the shutter-release button halfway again.

2 Press the shutter-release button the rest of the way down.

The picture will be recorded to the memory card or internal memory.



During Recording

While pictures are being recorded, the number of exposures remaining display will blink. **Do not open the battery-chamber/memory card slot cover.**

Removing the battery or the memory card while data is being saved may result in loss of data or in damage to the saved data, camera or card.

Autofocus Performance

Autofocus may not perform as expected in the following situations. In some rare cases, the subject may not be in focus despite the fact that the focus area or the focus indicator glows green:

- · Subject is very dark
- Objects of sharply differing brightness are included in the scene (e.g. the sun is behind the subject and the subject is in deep shadow)
- No contrast between the subject and surroundings (e.g. when the subject is standing in front of a white wall, wearing a white shirt)
- Several objects are at different distances from the camera (e.g. the subject is inside a cage)
- · Subject is moving rapidly

In these situations, try pressing the shutter-release button halfway again to refocus, several times if necessary. If the subject is still not in focus, select auto mode and use focus lock (27) to take the picture by first focusing on an object that is the same distance from the camera as the desired subject.

Notes about Face Detection

See "Notes about Face Detection" (26) for more information.

The Did someone blink? Screen

When **☑ Blink warning** is set to **On**, the **Did someone blink?** screen (☐ 100) is displayed after taking a picture if the camera detects a face with closed eyes.

AF-assist Illuminator and Flash

If the subject is poorly lit, the AF-assist illuminator (\square 95) may light when the shutter-release button is pressed halfway, and the flash (\square 28) may fire when the shutter-release button is pressed all the way down.

Step 4 Viewing and Deleting Pictures

Viewing Pictures (Playback Mode)

Press (playback).

The last picture taken will be displayed in full-frame playback mode.

Use the multi selector \blacktriangle , \blacktriangledown , \blacktriangleleft or \blacktriangleright to view additional pictures. Hold down the multi selector \blacktriangle , \blacktriangledown , \blacktriangleleft , or \blacktriangleright to scan quickly through pictures.

Pictures may be displayed briefly at low resolution while being read from the memory card or internal memory.

Press **a** to switch to shooting mode.

When \(\frac{1}{\text{\tinx}\text{\tinx}\text{\ti}\text{\texi}\text{\text{\text{\text{\text{\text{\text{\text{\text{\text{\text{\text{\text{\text{\te



Multi selector



Internal memory indicator

Deleting Pictures

1 Press to delete the picture currently displayed in the monitor.



2 Use the multi selector to select **Yes** and press **®**.

Deleted pictures cannot be recovered.

To exit without deleting the picture, choose **No** and press **®**.



Playback Mode

The following options are available in full-frame playback mode.

Option	Use	Jse Description	
Playback zoom	T (Q)	The picture can be enlarged up to about 10×. Press 🔞 to return to full-frame playback.	48
View thumbnails	W (53)	Rotate the zoom control to W to display 4, 9 or 16 picture thumbnails. While viewing 16 picture thumbnails, rotate the zoom control to W (to switch to calendar display.	46, 47
Switch to shooting mode	۵	Press .	8

Power ON by Pressing

When the camera is off, hold down **\rightarrow** to turn on the camera in playback mode. The lens will not extend.

Viewing Pictures

- Pictures stored in the internal memory can only be viewed if no memory card is inserted.
- When the monitor has turned off in standby mode to save power, press the power switch, the shutter-release button, or ► to reactivate it (□ 97).

Deleting the Last Picture Taken While in Shooting Mode

In shooting mode, press **t** to delete the last picture taken.



Selecting Multiple Pictures for Deletion

When **Delete** (\square 82) is selected from the playback menu (\square 79), multiple pictures can be deleted.

Easy auto mode

Automatic Scene Selection

The camera automatically selects one of the following scenes when you point the camera at a subject.

- Auto mode (general use)
- **2** Portrait (**1** 34)
- ► Landscape (□ 34)
- PY Night portrait (35)
- ■ Night landscape (□ 37)
- Close-up (◯ 38)
- Backlight (QQ 39)

Notes about Face Detection

• Depending on shooting conditions, such as whether or not the subject is facing the camera, faces may not be detected.

The camera may be unable to detect faces in the following situations:

- When faces are partially hidden by sunglasses or other obstructions
- When faces take up too much or too little of the frame
- When there are multiple people in the frame, the face on which the camera focuses depends on a variety of shooting conditions, such as whether or not the subject is facing the camera.
- In some cases, included those noted in "Autofocus performance" (
 ☐ 23), autofocus may not perform as expected, and the subject may not be in focus despite the fact that the double border glows green. When the camera is unable to focus, use another mode, such as ☐ (auto) mode, focus on another subject positioned at the same distance from the camera as the actual portrait subject, and use focus lock (
 ☐ 27).

Shooting in the Auto Mode

In \bigcirc (auto) mode, macro mode (\bigcirc 31) and exposure compensation (\bigcirc 32) can be applied and pictures can be taken using the flash mode (QQ 28) and self-timer (\square 30). Pressing the **MENU** button in (auto) mode allows you to set the items in the shooting menu (\square 70) according to shooting conditions.

1 Press to display the shooting-mode selection menu.

The shooting-mode selection menu will be displayed.

 


2 Press the multi selector **△** or **▼** to choose **△** and press (%).

The camera enters (auto) mode.

Set the flash (28), self-timer (30), macro mode (31) and exposure compensation (32) according to shooting conditions.

By pressing **MENU**, you can also set the items in the shooting menu (70) according to shooting conditions.



3 Frame the subject and shoot.

Camera focuses on subject in center of frame.





Focus Lock

When the camera focuses on an object in the center of the frame, you can use focus lock to focus on an off-center subject.

- Be sure that the distance between the camera and the subject does not change while focus is locked.
- When the shutter-release button is pressed halfway, exposure is locked.



in the center of the shutter frame.



release button halfway.



Position the subject Press the Confirm that the focus area is areen.



Continue holding down the shutterrelease button halfway release button and recompose the picture.



Press the shutterthe rest of the way down.

Using the Flash

The flash mode allows you to specify the settings according to shooting conditions.

- The flash has a range of approx. 0.5-7.0 m (1 ft. 8 in.-22 ft.) at the maximum wideangle zoom position and a range of approx. 0.5-3.0 m (1 ft. 8 in.-9 ft. 10 in.) at the maximum telephoto zoom position.
- Note that when using easy auto mode (18), only AUTO Auto (default setting) and fra available. When Auto is applied, the camera automatically selects the optimum flash mode setting for the scene mode it has selected.
- - **\$**AUTO Auto

Flash fires automatically when lighting is poor.

‡⊚ Auto with red-eye reduction

Reduces "red-eye" in portraits (QQ 29).

Off

Flash will not fire even when lighting is poor.

Fill flash

Flash fires when a picture is taken. Use to "fill-in" (illuminate) shadows and back-lit subjects.

≸ Slow sync

Auto flash mode is combined with slow shutter speed. Suitable for taking portraits with the night landscape as the background. Flash illuminates main subject; slow shutter speeds are used to capture background at night or under dim light.

Setting the Flash Mode

1 Press **\$** (flash mode) on the multi selector.

The flash menu is displayed.



2 Press the multi selector ▲ or ▼ to select a mode and press ⑥.

The icon for the selected flash mode is displayed at the top of the monitor.

 $\ \$ will disappear after a few seconds regardless of the **Photo info** option ($\ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \)$ 90).

If a setting is not applied by pressing (b) within a few seconds, the selection will be cancelled.



Shooting When Lighting Is Poor and the Flash Is Disabled (3)

- Use of a tripod is recommended to stabilize the camera during shooting and avoid the effects of camera shake.
- The 180 is displayed when the camera automatically increases sensitivity to minimize blur caused by slow shutter speed. Pictures taken when 180 is displayed may be slightly mottled.

Note on Using the Flash

When using the flash, reflections from dust particles in the air may appear as bright spots in pictures. To reduce these reflections, set the flash to ③ (Off).

The Flash Lamp

The flash lamp indicates flash status when the shutterrelease button is pressed halfway.

- On: Flash will fire when picture is taken.
- **Blinks**: Flash charging. Wait a few seconds and try again.
- Off: Flash will not fire when picture is taken.



The Flash Mode Setting

The default setting of the flash mode depends on the shooting mode.

- 🗳 (easy auto): 🗚 AUTO Auto
- Scene: varies with the selected scene mode (33-40).
- 🐷 (smart portrait): 🗱 AUTO Auto
- 🗖 (auto): 🗱 AUTO Auto

Flash cannot be used simultaneously with certain features. \rightarrow "Camera Settings that Cannot Be Set at the Same Time" (\square 78)

Red-eye Reduction

This camera uses advanced red-eye reduction ("In-Camera Red-Eye Fix").

If the camera detects "red-eye" when a picture is taken, Nikon's own In-Camera Red-Eye Fix processes the image before it is saved.

Note the following when taking pictures:

- The time required to save images increases slightly.
- Red-eye reduction may not always produce the desired results.
- In some rare cases, other portions of pictures may be affected. Use flash modes other than auto with red-eye reduction in above cases.

Taking Pictures with the Self-timer

When using the self-timer, pictures are taken 10 seconds after the shutter-release button is pressed. When using the self-timer, use of a tripod is recommended.

1 Press 🖒 (self-timer) on the multi selector.

The self-timer menu is displayed.



2 Press the multi selector **△** or **▼** to select **ON** and press **®**.

The self-timer icon (**৩** 10) is displayed.

If a setting is not applied by pressing (within a few seconds, the selection will be cancelled.



3 Frame the picture and press the shutter-release button halfway.

Focus and exposure will be set.





Press the shutter-release button the rest of the way down.

The self-timer starts and the number of seconds remaining until the shutter is released is displayed in the monitor. The self-timer lamp will blink. The lamp stops blinking one second before the picture is taken and remains lit until the shutter is released.





When the shutter is released, the self-timer will be set to OFF.

To stop the timer before a picture is taken, press the shutter-release button again.



Macro Mode

Macro mode is used for taking pictures of objects as close as 5 cm (2 in.). Note that the flash may be unable to light entire subject at distances of less than 50 cm (1 ft. 8 in.).

When using \square (easy auto) mode (\square 18), the macro mode button cannot be used to activate macro mode.

1 Press 🕊 (macro mode) on the multi selector.

The macro menu is displayed.



2 Press the multi selector ▲ or ▼ to select **ON** and press **®**.


The macro mode icon (3) is displayed.

If a setting is not applied by pressing within a few seconds, the selection will be cancelled.



3 Rotate the zoom control to move to the wide zoom position.

 Macro mode can be used to take a picture at the current zoom position when $\[mathbb{G}\]$ or the zoom indicator glows green.



The camera can focus on objects as close as about 5 cm (2 in.) at the widest zoom position, and as close as about 7 cm (2.8 in.) at the position where \triangle is displayed.

Autofocus

When using macro mode, the camera focuses continuously until the shutter-release button is pressed halfway to lock the focus. A sound will be heard while the camera focuses.

The Macro Mode Setting

When the shooting mode is **(auto)** mode, the macro mode setting will be stored even if the camera is turned off.

Exposure Compensation

Exposure compensation is used to alter exposure from the value suggested by the camera to make pictures brighter or darker.

1 Press (exposure compensation) on the multi selector.

The exposure compensation guide is displayed.



2 Press the multi selector ▲ or ▼ to select the desired setting and press [®].

To make the subject brighter, adjust the exposure compensation to the "+" side.

To make the subject darker, adjust the exposure compensation to the "-" side.

Exposure compensation can be set to values between -2.0 and +2.0 EV.

If a setting is not applied by pressing ${}^{\textcircled{\tiny{\textbf{M}}}}$ within a few seconds, the selection will be cancelled.

When set to any value other than **0.0**, **\emptyset** and the value are displayed.

3 Press the shutter-release button to shoot.

To turn off exposure compensation, repeat from step 1 and set the value to ${\bf 0.0}$, then press ${\bf @}$.



Exposure compensation



Using the Scene Mode

Camera settings are automatically optimized for the selected subject type. The following scene modes are available.

Ź Portrait	X Party/indoor	■ Night landscape	Fireworks show
■ Landscape	🔀 Beach/snow	🗱 Close-up	Сору
❖ Sports	ä Sunset	TI Food	省 Backlight
Night portrait	👛 Dusk/dawn	<u> </u>	🛱 Panorama assist

Setting the Scene Mode

Press in shooting mode to display the shooting-mode selection menu and use the multi selector and to select scene mode.





The icon of the last scene mode used is displayed. **2** (Portrait) is the default setting.

2 Press ▶, press ▲, ▼, ◄, or ▶ to select a scene mode, then press ເ.

The shooting mode screen for the selected scene is displayed.

"Features" → 🔲 34



3 Frame the subject and shoot.





Image Mode

When using scene mode, you can set the **Image mode** setting (22) by pressing **MENU**. If the image mode setting is changed, the new image mode setting is also applied to other shooting modes (except movie mode).

Features

The following icons are used for descriptions in this section: \P = flash mode (\square 28), \lozenge = self-timer (\square 30), \P = macro mode (\square 31), \square = exposure compensation (\square 32).

2 Portrait

Use this mode for taking portraits in which the main subject stands out clearly.

- If the camera detects a face, it focuses on the face. See "Face Detection" (22) for more information.
- If more than one face is recognized, the camera focuses on the face closest to the camera.
- If no faces are detected, focus will be on the center of the frame.
- Digital zoom is not available.



^{*} Other settings can be selected.

Landscape

Use this mode for vivid landscapes and cityscapes.

- Camera focuses at infinity. The focus area or focus indicator (\(\subseteq\) 6) always glows green when the shutter-release button is pressed halfway. Note, however, that objects in the foreground may not always be in focus.
- The AF-assist illuminator (95) does not light.



4	③	8	Off*	**	Off	74	0.0*

^{*} Other settings can be selected.

Sports \$

Use this mode for dynamic action shots that freeze the action in a single shot and record motion in a series of pictures.

- The camera focuses on the subject in the center of the frame. The camera focuses continuously until the shutterrelease button is pressed halfway to lock the focus.
- While the shutter-release button is held down all the way. the camera shoots up to three images at a rate of about 0.7 frames per second (fps) (when image mode is set to 4320×3240).
- The maximum frame rate with continuous shooting may vary depending upon the current image mode setting and the memory card used.
- Focus, exposure compensation, and white balance are fixed at the values determined with the first shot in each series
- The AF-assist illuminator (\$\sum 95\$) does not light.

 


^{*} Other settings can be selected.

Night portrait



Use this mode to achieve a natural balance between the main subject and background lighting in portraits taken at night. Flash is used to illuminate the subject while maintaining the mood of the background.



- If more than one face is recognized, the camera focuses on the face closest to the camera.
- If no faces are recognized, focus will be on the center of the screen.
- Digital zoom is not available.



^{*1} Flash mode is set to fill flash with slow sync and red-eye reduction, and cannot be changed.

^{*2} Other settings can be selected.

Using the Scene Mode

XX Party/indoor

Captures the effects of candlelight and other indoor background lighting.

- Camera focuses on subject in center of frame.
- As pictures are easily affected by camera shake, hold the camera steadily. In a dark place, the use of a tripod is recommended.



♦ ♦®*¹ **৩** Off*² **♥** Off **½** 0.0*²

Beach/snow

Captures the brightness of such subjects as snowfields, beaches, or sunlit expanses of water.

• Camera focuses on subject in center of frame.



 ★
 \$\frac{1}{2}\$
 Off*
 \$\frac{1}{2}\$
 Off*
 \$\frac{1}{2}\$
 O.0*

 
^{*} Other settings can be selected.



Preserves the deep hues seen in sunsets and sunrises.

• Camera focuses on subject in center of frame.





^{*} Other settings can be selected.

 $^{^{*1}}$ The flash may change to slow sync with red-eye reduction. Other settings can be selected. *2 Other settings can be selected.

 
i Dusk/dawn

 $\overline{\Lambda}$

Preserves the colors seen in the weak natural light before sunrise or after sunset.

- · Camera focuses at infinity. The focus area or focus indicator (6) always glows green when the shutter-release button is pressed halfway. Note, however, that objects in the foreground may not always be in focus.
- The AF-assist illuminator (95) does not light.





* Other settings can be selected.

Night landscape

 $\overline{\Lambda}$

Slow shutter speeds are used to produce stunning night landscapes.

- · Camera focuses at infinity. The focus area or focus indicator (6) always glows green when the shutter-release button is pressed halfway. Note, however, that objects in the foreground may not always be in focus.
- The AF-assist illuminator (95) does not light.





^{*} Other settings can be selected.

& Close-up

Photograph flowers, insects and other small objects at close range.

- Macro mode (31) will turn ON and the zoom will move to a position that allows macro shooting.
- The camera can focus on objects as close as about 5 cm (2 in.) at the widest zoom position, and as close as about 7 cm (2.8 in.) at the position where △ is displayed.



 The camera focuses continuously until focus is locked by pressing the shutter-release button halfway.



* Other settings can be selected. Note that the flash may be unable to light entire subject at distances of less than 50 cm (1 ft. 8 in.).

III Food

Use this mode when taking pictures of food. See "Taking Pictures for Food Mode" (41) for details.

• Camera focuses on subject in center of frame.



4	3	৩	Off*	*	On	7	0.0*
	_	_		10		_	

^{*} Other settings can be selected.

m Museum

Use indoors where flash photography is prohibited (for example, in museums and art galleries) or in other settings in which you do not want to use the flash.

- Camera focuses on subject in center of frame.
- BSS (best shot selector) can be used to shoot (
 \(\sigma \) 76).
- As pictures are easily affected by camera shake, hold the camera steadily.
- The AF-assist illuminator (95) does not light.



^{*} Other settings can be selected.



Fireworks show

1

Off

Slow shutter speeds are used to capture the expanding burst of light from fireworks.

- Camera focuses at infinity. When the shutter-release button is pressed halfway, the focus indicator (6) always glows green. Note, however, that objects in the foreground may not always be in focus.
- The AF-assist illuminator (QQ 95) does not light. (1)



0.0

ket all attended well illie Medicana

कृष्य का जायाच्या विश्वास्त्र के व्यक्ता विश्वास wall all all all proper

I correct come to chemin



Provides clear pictures of text or drawings on a white board or in print.

Off

- Camera focuses on subject in center of frame.
- Use macro mode (31) to focus at short ranges.
- · Colored text and drawings may not show up well.



æ

(F)

Backlight

Use when light is coming from behind your subject, throwing features or details into shadow. The flash fires automatically to "fill in" (illuminate) shadows.

Camera focuses on subject in center of frame.



4	4	(%)	Off*	.w.	Off	134	0.0*
•	, ▼		011	10	0.11	_	0.0

^{*} Other settings can be selected.

^{*} Other settings can be selected.

Using the Scene Mode

□ Panorama assist



Use when taking a series of pictures that will later be joined to form a single panorama using the supplied Panorama Maker 5 software. See Taking Pictures for a Panorama (42) for details.



^{*} Other settings can be selected.

Taking Pictures for Food Mode

Use this mode when taking pictures of food.

1 Press
in shooting mode to display the shooting-mode selection menu and use the multi selector to select
I Food (□ 33).

The macro mode (\square 31) will turn **ON** and the zoom will automatically move to the closest possible shooting position.



2 Press the multi selector ▲ or ▼ to adjust the color if necessary.

 
You can adjust the hues to compensate for changes in the subject's color caused by the surrounding lighting. Press \triangle to increase the amount of red, or ∇ to increase the amount of blue.



3 Frame the picture.

The camera can focus on objects as close as about 5 cm (2 in.) at the widest zoom position, and as close as about 7 cm (2.8 in.) at the position where \triangle is displayed.

The camera focuses on the subject in the center of the frame. Use focus lock to frame the picture on an object not in the center of the frame (\(\sime\) 27).



4 Press the shutter-release button to shoot.

Pressing the shutter-release button halfway locks the focus, and pressing the shutter-release button the rest of the way down takes the picture.



€* [] 1/125 F3.1

When the camera is unable to focus, the focus area will blink. Change the composition and try pressing the shutter-release button halfway again.

Notes when Using the Food Mode

The flash is disabled. The macro mode (\square 31) will be locked to **ON**.

Adjusting Hues When Using Food Mode

Hue settings that are adjusted in food mode are saved in the camera's memory even after the camera is turned off, and are used the next time food mode is selected.

Taking Pictures for a Panorama

The camera focuses on the subject in the center of the frame. Use a tripod for best results.

Press in shooting mode to display the shooting-mode selection menu and use the multi selector to select Panorama assist (□ 33).

The panorama direction icon (()) is displayed to show the direction in which pictures will be joined.



2 Use the multi selector to choose the direction and press **®**.

Select how pictures will be joined together in the completed panorama; right (\bigcirc), left (\bigcirc), up (\triangle) or down (\bigcirc).

The yellow panorama direction icon (DD) is displayed to the direction pressed and the direction is fixed when \otimes is pressed. The white fixed direction D is displayed.



Apply flash mode (\square 28), self-timer (\square 30), macro mode (\square 31) and exposure compensation (\square 32) settings with this step, if necessary. Press \bigcirc to reselect the direction.

3 Shoot the first picture.

The first picture is superimposed in the first third of the monitor





4 Shoot the second picture.

Frame the next picture so that one third of the frame overlaps the first picture, and press the shutter-release button.

Repeat until you have taken the necessary number of pictures to complete the scene.





5 Press **®** when shooting is completed.

The camera returns to step 2.



Panorama Assist

Set flash mode, self-timer, macro mode and exposure compensation before taking the first picture. They cannot be changed after the first picture is taken. Pictures cannot be deleted, nor can zoom or **Image mode** setting $(\square 72)$ be adjusted after the first picture is taken.

The panorama series is terminated if the camera enters standby mode with the auto off function $(\square 97)$ during shooting. Setting the time allowed to elapse before the auto off function is enabled to a longer setting is recommended.

Note on AE/AF-L

When using panorama assist mode, all pictures taken in a panorama series have the same white balance, exposure, and focus settings as the first picture taken.

When the first picture is shot, AE/AF-L is displayed to indicate that exposure, white balance, and focus are locked.



Panorama Maker 5

Install Panorama Maker 5 from the supplied ViewNX 2 CD.

Transfer pictures to a computer (\$\sigma\$ 58) and use Panorama Maker 5 (\$\sigma\$ 61) to join them in a single panorama.

More Information

See, "Image File and Folder Names" (110) for more information.

Using Smart Portrait Mode

The camera detects a smiling face to shoot the face automatically.

1 Press in shooting mode to display the shooting-mode selection menu and use the multi selector and ▼ to select then press .

 




2 Frame the picture.

Point the camera at the subject.

If the camera detects a person's face, the face will be framed by a double yellow border in the focus area, and when the face comes into focus, the double border will instantly turn green and the focus will be locked.



Up to three faces will be recognized. When the faces of multiple people are detected, the face nearest the center of the frame will be framed by a double border in the focus area and the other faces will be framed by a single border.

3 The shutter is automatically released.

If the camera detects the smiling face of the person framed by a double border, the shutter is automatically released.

The self-timer lamp (\square 4) blinks when the camera detects a human face. Just after the shutter is released, the self-timer lamp blinks rapidly.

Each time the shutter is released, the camera again begins face detection and smile detection operations for continuous automatic shooting.

Pictures can also be taken by pressing the shutter-release button. If the camera does not detect any faces, the camera focuses on the subject in the center of the frame.

4 Press to exit smart portrait mode.

Change to another shooting mode.



Face Detection and Smiling Face Detection Features

If the camera is pointed at a person's face while the camera is in smart portrait mode, the face is automatically detected, and the smile of the detected face can also be detected.

- In some shooting conditions, face recognition does not work and faces cannot be detected.
- See "Face Detection" (22) for more information about face detection.

Auto Off (Standby Mode) When Using Smart Portrait Mode

When using smart portrait mode, auto off (\square 97) will turn the camera off if no operations are performed in the following situations:

- The camera does not recognize any faces.
- The camera detected a face but cannot detect a smiling face.

Functions Available in Smart Portrait Mode

- Flash mode (28) can be changed.
- Self-timer (30) and macro mode (31) cannot be used.
- Exposure compensation (32) can be adjusted.
- When MENU is pressed to display the (many portrait) menu, Image mode (many 2) can be adjusted. If the image mode setting is changed, the new image mode setting is also applied to other shooting modes (except movie mode).
- Digital zoom is not available.

More Information

See, "Autofocus" (\square 23) for more information.

Viewing Multiple Pictures: Thumbnail Playback


Rotate the zoom control to **W** () in full-frame playback mode () 24) to display pictures in "contact sheets" of thumbnail images. The following operations can be performed while thumbnails are displayed.



То	Use	Description	
Choose pictures	(A)	Press the multi selector \triangle , \bigvee , \triangleleft or \triangleright .	9
Display the calendar/ Change the number of frames displayed	W (ES) T (?)	Rotate the zoom control to \mathbf{W} (\blacksquare) to change the number of frames displayed from $4 \rightarrow 9 \rightarrow 16$, or to display the calendar. When the calendar is displayed, you can select images to view based on the day they were taken (\square 47). Rotate the zoom control to \mathbf{T} (\mathbb{Q}) to return to thumbnail display mode.	_
Reduce the number of frames displayed	T (9)	Rotate the zoom control to \mathbf{T} (\mathbf{Q}) to change the number of frames displayed from 16 \rightarrow 9 \rightarrow 4. While 4 frames are displayed, rotate the zoom control to \mathbf{T} (\mathbf{Q}) again to return to full-frame display mode.	
Switch to full-frame playback	®	Press 🔞.	24
Switch to shooting mode	۵	Press .	8

Thumbnail Playback Mode Display

While pictures selected for **Print set** (\square 68) and **Protect** (\square 104) are chosen, the icons shown at right are displayed with them. Movies are displayed as film frames.

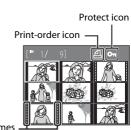

Film frames

Calendar Display

Rotate the zoom control to \mathbf{W} (\blacksquare) when the pictures are displayed in 16-thumbnail (\square 46) in playback mode to switch to calendar display.

You can select images to view based on the day they were taken. Days containing pictures have a yellow line under them.



The following operations are available in calendar display.

То	Use	Description	
Choose date	0 0 0	Press the multi selector ▲, ▼, ◀ or ▶.	
Switch to full-frame playback	®	The first picture for that date will be displayed full-frame.	24
Switch to thumbnail display	T (Q)	Rotate the zoom control to ${f T}$ (${f Q}$).	-

Calendar Display

- Pictures taken when the camera's date is not set are treated as pictures taken on January 1, 2011.
- \bullet The $\mbox{\em \fin}$ and $\mbox{\em MENU}$ buttons are not available during calendar display.

Taking a Closer Look: Playback Zoom

Rotating the zoom control to $\mathbf{T}(\mathbf{Q})$ during full-frame playback mode (\mathbf{Q} 24) zooms the current image, with the center of the picture displayed in the monitor.

 The guide displayed in the right bottom in the monitor will show which part of the image is currently displayed.



The following operations can be performed while pictures are zoomed in.

То	Use	Description	
Zoom in	T (Q)	Rotate the zoom control to T (Q). Images can be magnified by up to 10×.	-
Zoom out	Rotate the zoom control to W (2). When the magnification ratio reaches 1×, the display returns to full-frame playback mode.		-
View other areas of picture	0 0 0	Press the multi selector \triangle , ∇ , \triangleleft or \triangleright to scroll to areas of the picture not visible in the monitor.	9
Switch to full-frame playback	68	Press 🕅.	
Crop picture	MENU	Press MENU to crop current picture to contain only the portion visible in the monitor.	52
Switch to shooting mode	۵	Press .	8

Pictures Taken Using Face Detection

When the zoom control is rotated to $\mathbf{T}(Q)$ during full-frame playback mode, pictures taken using face detection (\square 22) are magnified using the face that was focused on at the time of shooting as the centralized point.



- Rotating the zoom control to **T** (**Q**) or **W** (**□**) further can change the magnification ratio and the pictures will be zoomed in as usual.

Editing Pictures

The editing features described below are available. Use the camera to edit pictures in-camera and store them as separate files (\square 110).

Editing function	Description
D-Lighting (50)	Create a copy of the current picture with enhanced brightness and contrast, brightening dark portions of the picture.
Small picture (51)	Create a small copy of pictures suitable for use on web pages or as e-mail attachments.
Crop (52)	Enlarge the image or refine the composition and create a copy containing only the portion visible in the monitor.

Notes on In-camera Editing

- Pictures taken at an **Image mode** setting (◯ 72) of 🔀 **3968×2232** cannot be edited.
- Only pictures taken with the COOLPIX L24 can be edited with this camera.
- When using a different model of digital camera, pictures edited with this camera may not be displayed properly and may not be able to be transferred to a computer.
- Editing functions are not available when there is not enough free space in the internal memory or on the memory card.

Restrictions on Picture Editing

The following limitations apply when editing pictures that were created by editing.

Copies Created By:	Can Be Edited By:		
D-Lighting	Small picture and crop can be used.		
Small picture Crop	Additional editing is not possible.		

- Copies created by the editing functions cannot be edited again using the same edit function.
- To use D-Lighting together with small picture or crop, use the D-Lighting first.

Original Pictures and Edited Copies

- Copies created with editing functions are not deleted if the original pictures are deleted. The
 original pictures are not deleted if copies created with editing functions are deleted.
- Edited copies are stored with the same recording date and time as the original.
- Print set (
) 68) and Protect (
) 104) settings configured for original pictures are not reflected in their edited copies.

Enhancing Brightness and Contrast: D-Lighting

Create a copy of the current image with enhanced brightness and contrast, brightening dark portions of the picture. Enhanced copies are saved as separate files

Select the desired picture from full-frame (24) or thumbnail (46) playback mode and press MENU.

The playback menu will be shown.



2 Use the multi selector to choose **D-Lighting** and press **(N)**.

> The original version will be shown on the left and the edited version will be shown on the right.



3 Choose **OK** and press **®**.

> A new copy with enhanced brightness and contrast is created.

To cancel, select **Cancel** and press **®**.

D-Lighting copies can be recognized by the a icon displayed during playback.





Resizing Pictures: Small Picture

Create a small copy of the current picture. Suitable for uploading to web sites or sending by e-mail. The following sizes are available: 440×480, 320×240, and 160×120.

Small copies are saved as JPEG files with a compression ratio of 1:16.

1 Select the desired picture from full-frame (24) or thumbnail (46) playback mode and press MENU.



The playback menu will be shown.

2 Use the multi selector to choose **Small** picture and press (%).



3 Choose the desired copy size and press **®**.



4 Choose **Yes** and press **®**.

A new, smaller copy is created.

To cancel, select **No** and press **(N)**.

The copy is displayed with a gray frame.





Creating a Cropped Copy: Crop

This function is only available when WENU & will is displayed in the monitor with playback zoom (48) enabled. Cropped copies are saved as separate files.

1 Rotate the zoom control to **T** (Q) in full-frame playback mode to zoom in on the image.

To crop a picture displayed in "tall" (portrait) orientation, zoom in on the picture until the black bars displayed on the both sides of the monitor disappear.

The cropped picture will be displayed in landscape orientation. If you want to crop the portrait image in the captured position, use **Rotate Image** (\square 105) to change the position of the portrait image to landscape before cropping it, and then return the image to the captured position.



2 Refine copy composition.

Rotate the zoom control to $\mathbf{T}(Q)$ or $\mathbf{W}(\blacksquare)$ to adjust the zoom ratio.

Press the multi selector \triangle , ∇ , \triangleleft or \triangleright to scroll the picture until only the portion you want to copy is visible in the monitor.



3 Press MENU.



4 Use the multi selector to select **Yes** and press **®**.

A new picture, containing only the portion visible in the monitor, is created.

To cancel, select **No** and press **®**.



About the Size of the Original Image

The smaller the cropped area of the image, the smaller of the cropped image size (number of pixels). When the image is cropped and the size of the cropped copy is 320×240 or 160×120 , the image is displayed with a gray border on the playback screen, and the small picture icon \square or \square is displayed on the left of the playback screen.

More Information

Recording Movies

To shoot movies with sound recorded via the built-in microphone, select shooting mode and follow the steps below.

1 Press in shooting mode to display the shooting-mode selection menu and use the multi selector ▲ and ▼ to select ♠, then press ๋.

The maximum length of the movie that can be recorded is displayed in the monitor (\$\sum_{2}\$ 54). Regardless of the remaining





Press the shutter-release button all the way down to start recording.

Camera focuses on subject in center of frame. A progress bar at the bottom of the monitor shows the amount of recording time remaining. To end recording, press the shutter-release button all the way down a second time.





If recording time runs out, recording stops automatically.

Recording Movies

- The camera focuses when the shutter-release button is pressed halfway, and the focus remains locked while the shutter-release button is pressed halfway. Focus is locked while recording.
- Optical zoom cannot be applied while movies are recorded. Digital zoom cannot be used just before recording a movie, but up to 2x digital zoom can be applied while movies are recorded.
- Smear (\(\sum \) 114) visible in the monitor when shooting movies is visible in the saved movie file. Avoiding bright objects such as the sun, reflections of the sun, and electric lights is recommended to avoid smear effects.
- When recording or playing back movies, colored stripes (interference patterns or moire) may appear
 on subjects that have a regular, repeating grid, such as pattern of weave in cloths or windows in a
 building, depending on the shooting distance or zoom ratio. This phenomenon occurs when the
 subject's pattern interferes with the camera sensor grid, and it does not indicate a malfunction.

While the Camera is Saving Movies

When movie recording stops, the shooting screen is displayed after the movie has been completely saved. Do not open the battery-chamber / memory card slot cover.

Removing the memory card or the battery while a movie is being saved may result in loss of the movie data or damage to the camera or the memory card.

Options Available When Shooting Movies

- Press MENU to display the 🖫 (movie) menu and set Movie options (☐ 54).

The Movie Menu

Movie options setting can be changed from the movie menu.

Displaying the Movie Menu

Press lacktriangle in shooting mode to display the shooting-mode selection menu and set the shooting menu to $\mbox{$\mathbb{R}$}$ (movie) mode ($\mbox{$\square$}$ 53).

Press **MENU** to display the movie menu.



- Use the multi selector to choose and apply settings (9).
- To exit the menu, press MENU.

Selecting Movie Options

The movie menu offers the options shown below.

Option	Resolution and Frame Rate	
TV movie 640 (default setting)	Resolution: 640×480 Frame rate: About 30 frames per second	
Small size 320	Resolution: 320×240 Frame rate: About 30 frames per second	

Movie Options and Maximum Movie Length

Option	Internal memory (Approx. 17 MB)	Memory card (4 GB)*
TV movie 640 (default setting)	9 s	45 min
Small size 320	38 s	3 h

All figures are approximate. Maximum movie length or frames varies with make of memory card.

* Regardless of the remaining memory on the memory card, the maximum size of a single movie is 2 GB, and the maximum length of a single movie is 29 minutes. The maximum recording time that is displayed is the maximum recording time for one movie.

 


Movie Playback

In full-frame playback mode (24), movies are recognized by the Movie options icon (54). To play a movie, display it in full-frame playback mode and press .



Use the zoom control **T/W** to adjust playback volume. Playback controls appear at the top of the monitor. Press the multi selector ◀ or ▶ to choose a control, then press **®** to perform the selected operation. The following operations are available.



То	Press	Description	
Rewind	4	Rewind movie. Playback resumes when 🔞 is released.	
Advance	•	Advance movie. Playback resumes when 🕦 is released.	
Pause	II	Pause playback. The following operations can be performed while playback is paused.	
		4	Rewind movie by one frame. Rewind continues while ® is pressed.
		₽	Advance movie by one frame. Advance continues while ® is pressed.
		Þ	Resume playback
End	•	End playback and return to full-frame playback.	

Deleting Movie Files

 
Press **w** when displayed in full-frame playback mode (24), or when selected in thumbnail (46) playback mode. A confirmation dialog is displayed. Choose **Yes** and press to delete the movie, or choose **No** and press to return to the normal playback display without deleting the movie.



Connecting to a TV


Connect the camera to a television using an optional audio video cable (AV cable) (\$\sum_{108}\$) to play back pictures on a television.

1 Turn off the camera.



2 Connect the camera to the TV.

Connect the yellow plug to the video-in jack on the TV, and the white plug to the audio-in jack.

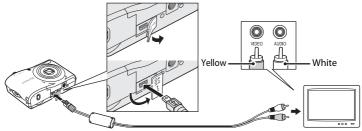

3 Tune the television to the video channel.

See the documentation provided with your television for details.

4 Hold down ▶ to turn on the camera.

The camera enters playback mode, and the pictures taken will be displayed on the television.

While connected to the TV, the camera monitor will remain off



Connecting an AV Cable

When connecting the AV cable, be sure that the camera connector is oriented correctly. Do not use force when connecting the AV cable to the camera. When disconnecting the AV cable, do not pull the connector at an angle.

Video Mode

Be sure that the camera's video mode setting conforms to the standard used by your television. The video mode setting is an option set in the **Set up** menu (\square 83) > **Video mode** (\square 99).

Connecting to a Computer

Use the supplied USB cable to connect the camera to a computer and copy (transfer) images to the computer.

Before Connecting the Camera

Install the Software

Use the supplied ViewNX 2 CD and install the following software on the computer.

- ViewNX 2: Use the image transfer feature "Nikon Transfer 2" to save images that
 were captured with the camera on the computer. Saved images can be viewed
 and printed. Image and movie editing features are also supported.
- Panorama Maker 5: This software can join a series of images to create a single panorama image.

For more information on installing the software, refer to the Quick Start Guide.

Compatible Operating Systems

Windows

Windows 7 Home Basic/Home Premium/Professional/Enterprise/Ultimate, Windows Vista Home Basic/Home Premium/Business/Enterprise/Ultimate (Service Pack 2), or Windows XP Home Edition/Professional (Service Pack 3)

Macintosh

Mac OS X (version 10.4.11, 10.5.8, 10.6.4)

Refer to the Nikon website for the latest information on operating system compatibility.


Notes on Power Source

- When connecting the camera to a computer to transfer images, use fully charged batteries to prevent the camera from turning off unexpectedly.
- To power the camera continuously for extended periods, use an AC Adapter EH-65A (available separately) (108). Do not, under any circumstances, use another make or model of AC adapter.
 Failure to observe this precaution could result in overheating or in damage to the camera.

Transferring Images from a Camera to a Computer

- **1** Start the computer to which ViewNX 2 was installed.
- **2** Be sure that the camera is off.
- **3** Connect the camera to the computer using the supplied USB cable.

Be sure that connectors are properly oriented. Do not attempt to insert connectors at an angle, and do not use force when connecting or disconnecting the USB cable.

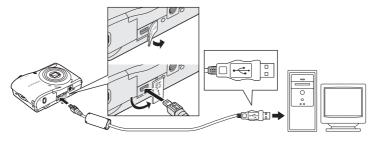

4 Turn on the camera.

The power-on lamp will light. The camera monitor will remain off.



5 Start the ViewNX 2 image transfer feature "Nikon Transfer 2" installed on the computer.

Windows 7

When the **Devices and Printers** L24 screen is displayed, click **Change program** under **Import pictures and videos**. Select **Import File using Nikon Transfer 2** in the **Change program** dialog and click **OK**.

Double-click Import File on the Devices and Printers L24 screen.

Windows Vista

When the AutoPlay dialog is displayed, click Import File using Nikon Transfer 2.


Windows XP

When the action selection dialog is displayed, select **Nikon Transfer 2 Import File**, and click **OK**.

Mac OS X

Nikon Transfer 2 will start automatically when the camera is connected to the computer if **Yes** was selected in the **Auto-Launch setting** dialog when Nikon Transfer 2 was first installed.

- If charge for the batteries inserted into the camera is low, the computer may not recognize the camera. If the camera is not recognized, images will not be transferred.
- If there are a large number of images on the memory card, it may take some time for Nikon Transfer 2 to start.
- 6 Confirm that the source device is displayed in the transfer options Source panel and click Start Transfer.

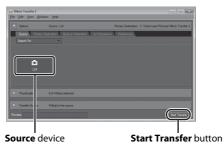

Any images that have not been transferred to the computer will be transferred (default setting of ViewNX 2).

Connecting to a Computer

ViewNX 2 starts automatically when the transfer is complete (default setting of ViewNX 2). Transferred images can be viewed.



For more information on using ViewNX 2, refer to the ViewNX 2 help information (\square) 61).

Disconnecting the Camera

Do not turn off the camera or disconnect the camera from the computer during transfer.

When transfer is complete, turn off the camera and disconnect the USB cable.



Transferring Images Using a Computer's Card Slot or a Commerciallyavailable Card Reader

When the memory card is inserted into a computer's card slot or into a commercially-available card reader, the images can be transferred using "Nikon Transfer 2", the image transfer feature of ViewNX 2.

- Make sure that the memory card being used is supported by the card reader or other card reading device.
- To transfer images, insert the memory card into the card reader or card slot and follow the procedure from step 5 (59).
- To transfer images saved in the camera's internal memory, the images must first be copied to a memory card using the camera (\square 106).



Starting ViewNX 2 or Nikon Transfer 2 Manually

Windows

Choose Start menu > All Programs > ViewNX 2 > ViewNX 2.

Double-clicking the ViewNX 2 shortcut icon on the desktop will also start ViewNX 2.

Mac OS X

Open the Applications folder, open the Nikon Software > ViewNX 2 folders in that order, and then double-click the ViewNX 2 icon. Clicking the ViewNX 2 icon on the Dock will also start ViewNX 2.

Click **Transfer** in the ViewNX 2 screen to start Nikon Transfer 2.



Viewing ViewNX 2 Help Information

For more information on ViewNX 2 or Nikon Transfer 2, start ViewNX 2 or Nikon Transfer 2 and select ViewNX 2 Help from the Help menu.

Panorama Creation with Panorama Maker 5

- Use a series of images captured in **Panorama assist** scene mode (40) to create a single panorama photo with Panorama Maker 5.
- Panorama Maker 5 can be installed on a computer using the supplied ViewNX 2 CD.
- After installation is complete, follow the procedure described below to start Panorama Maker 5.

Windows

Choose Start menu>All Programs>ArcSoft Panorama Maker 5>Panorama Maker 5.

Mac OS X

Open Applications and double-click the Panorama Maker 5 icon.


• For more information on using Panorama Maker 5, refer to the on-screen instructions and help information contained in Panorama Maker 5.

Image File Names and Folder Names

See "Image File and Folder Names" (110) for more information.

Connecting to a Printer

Users of PictBridge-compatible (126) printers can connect the camera directly to the printer and print pictures without using a computer.

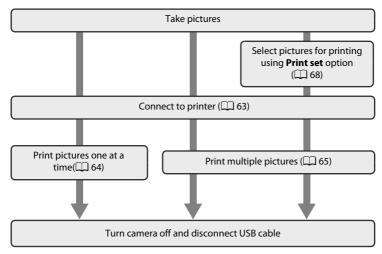

Note on Power Source

When connecting the camera to a printer, use a fully charged batteries to prevent the camera from turning off unexpectedly.

To power the camera continuously for extended periods, use an AC Adapter EH-65A (available separately) (\square 108). Do not, under any circumstances, use another make or model of AC adapter. Failure to observe this precaution could result in overheating or in damage to the camera.

Printing Pictures

 
In addition to printing pictures transferred to a computer from your personal printer and printing over a direct camera-to-printer connection, the following options are also available for printing pictures:

- Insert a memory card into a DPOF-compatible printer's card slot
- Take a memory card to a digital photo lab

For printing using these methods, you can specify the pictures and the number of prints each using **Print set** in the playback menu $(\square 68)$.


Connecting the Camera and Printer

Turn off the camera.



2 Turn on the printer. Check printer settings.

3 Connect the camera to the printer using the supplied USB cable.

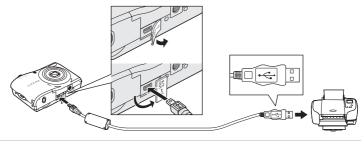

4 Turn on the camera.

When connected correctly, the **PictBridge** startup screen (1) is displayed in the camera monitor, then the **Print selection** screen (2) is displayed.





Connecting the Audio Video/USB Cable

When connecting the USB cable, be sure that the connectors are oriented correctly. Do not use force when connecting the USB cable. When disconnecting the USB cable, do not pull the connector at an angle.

Printing Pictures One at a Time

After connecting the camera to the printer correctly (\square 63), print pictures by following the procedure below.

1 Use the multi selector to choose the desired picture and press **®**.

Rotate the zoom control to \mathbf{W} (\blacksquare) to display 12 thumbnails, and to \mathbf{T} (\mathbf{Q}) to switch back to full-frame playback.



2 Choose **Copies** and press **®**.



Choose the number of copies (up to nine) and press **®**.



4 Choose **Paper size** and press **®**.



5 Choose the desired Paper size and press **®**. To specify paper size using printer settings, choose **Default** in the paper size menu.



 
6 Choose **Start print** and press **®**.



7 Printing starts.

Monitor display returns to that shown in step 1 when printing is complete.

To cancel before all copies have been printed, press **®**.



Current print/ total number of prints

Printing Multiple Pictures

After connecting the camera to the printer correctly (\square 63), print pictures by following the procedure below.

When the print selection screen is displayed, press MENU.

The **Print menu** is displayed.



2 Use the multi selector to choose **Paper size** and press **®**.

Press **MENU** to exit the print menu.



3 Choose the desired Paper size and press **®**.

To specify paper size using printer settings, choose **Default** in the paper size menu.



4 Choose **Print selection**, **Print all images** or **DPOF printing** and press (R).



Print selection

Select the images (up to 99) and the number of copies (up to nine) of each image.

Press the multi selector \blacktriangleleft or \blacktriangleright to select pictures, and press \blacktriangle or \blacktriangledown to set the number of copies for each.

Pictures selected for printing can be recognized by the check mark ❤ and the numeral indicating the number of copies to be printed. Pictures for which no copies have been specified will not be printed.

Rotate the zoom control to **T** (**Q**) to switch to full-frame playback. Rotate the zoom control to **W** (**S**) to switch back to thumbnail display. Press **W** when setting is complete.

When the menu shown on the right is displayed, select **Start print** and press **®** to start printing. Choose **Cancel** and press **®** to return to the print menu.





Print all images

All pictures stored in the internal memory, or on the memory card, are printed one at a time.

When the menu shown on the right is displayed, select **Start print** and press **®** to start printing. Choose **Cancel** and press **®** to return to the print menu.



DPOF printing

Print pictures for which a print order was created in **Print set** (QQ 68).

- When the menu shown on the right is displayed, select **Start print** and press to start printing. Choose **Cancel** and press to return to the print menu.
- To view the current print order, choose **View images** and press **®**. To print pictures, press
 ® again.

 




5 Printing starts.

Monitor display returns to the print menu (step 2) when printing is complete.

To cancel before all copies have been printed, press **®**.



Current print/ total number of prints



The camera supports the following paper sizes: **Default** (the default paper size for the current printer), 3.5×5 in., 5×7 in., 100×150 mm, 4×6 in., 8×10 in., Letter, A3, and A4. Only sizes supported by the current printer will be displayed. To specify paper size using printer settings, choose **Default** in the paper size menu.

Creating a DPOF Print Order: Print Set

Before printing images saved on a memory card using one of the methods listed below, you can create a digital "print order" that specifies which images should be printed and how many copies of each image should be printed, and save this information on the memory card.

- Printing with a DPOF-compatible (QQ 126) printer that features a memory card slot.
- Printing using a digital photo lab that supports DPOF.
- Printing by connecting the camera (62) to a PictBridge-compatible (126) printer (If the memory card is removed from the camera, you can create the print order for images saved in the internal memory and print images according to the print order.)
- **1** Press **MENU** in playback mode.

The playback menu is displayed.



2 Use the multi selector to choose **Print set** and press **®**.



3 Choose **Select images** and press **®**.



4 Choose the pictures (up to 99) and the number of copies (up to nine) for each.

Press the multi selector ◀ or ▶ to choose the desired pictures. Press ▲ or ▼ to set the number of copies for each. Pictures selected for printing can be recognized by the check mark and the numeral indicating the number of copies to be printed. Pictures for which no copies have been specified will not be printed.



Rotate the zoom control to $\mathbf{T}(Q)$ to switch to full-frame playback. Rotate the zoom control to $\mathbf{W}(\mathbf{\Xi})$ to switch back to thumbnail display.

Press (8) when setting is complete.

5 Choose whether or not to also print shooting date and photo information.

Choose **Date** and press **®** to print date of recording on all pictures in the print order.

Choose **Info** and press **®** to print photo information (shutter speed and aperture) on all pictures in the print order

Choose **Done** and press **®** to complete the print order and exit

Pictures selected for printing are indicated by the licon displayed during playback.





Notes on Printing Shooting Date and Photo Information

- When the **Date** and **Info** options are enabled in the print set menu, shooting date and photo information are printed on pictures when a DPOF-compatible printer (126) which supports printing of shooting date and photo information is used.
- Photo information cannot be printed when the camera is connected directly to a printer, via the supplied USB cable, for DPOF printing (66).
- Date and Info are reset each time the print set menu is displayed.
- The date and time printed on pictures with DPOF printing when Date in the Print set menu is enabled, are those recorded with the picture when it was taken. Date and time printed using this option are not affected when the camera's date and time setting are changed from the setup menu after pictures are recorded.



Deleting All Print Orders

Choose **Delete print set** in step 3 of the print set procedure and press **®** to delete print orders for all pictures.

Date Imprint

The shooting date and time can be imprinted in pictures at the time of shooting by using **Date imprint** (\square 92) in the setup menu. This information can be printed even from printers that do not support printing of date and time (\square 69). Only the Date imprint date and time on pictures will be printed, even if **Print set** is enabled with date selected in the print set screen.

Shooting Options: The Shooting Menu

While shooting in (auto) mode (27), the shooting menu contains the following options.

#	Image mode	72
	Choose image size and quality. Also available when using other shooting r (except movie mode).	modes
MB	White balance	1 74
	Match white balance to the light source.	
	Continuous	1 76
	Change settings to Continuous or BSS (best shot selector).	
Ø	Color options	1 77
	Make colors more vivid or record pictures in monochrome.	

Displaying the Shooting Menu

Press lacktriangle in shooting mode to display the shooting-mode selection menu and set the shooting menu to lacktriangle (auto) mode (lacktriangle 27).

Press **MENU** to display the shooting menu.



- Use the multi selector to choose and apply settings (\square 9).
- To exit the shooting menu, press **MENU**.

♦ Image mode

Pictures taken with a digital camera are recorded as image files. The size of the files, and with it the number of images that can be recorded, depends on the size and quality of the images. Before shooting, choose an image mode according to how you plan to use the picture.

	Setting	Size (pixels)	Description
14 fà	4320×3240★	4320×3240	Highest quality; suitable for enlargements or high-quality prints. The compression ratio is approximately 1:4.
14м	4320×3240 (default setting)	4320×3240	Best choice in most situations. The
8м	3264×2448	3264×2448	compression ratio is approximately 1:8.
5м	2592×1944	2592×1944	
Зм	2048×1536	2048×1536	Smaller size allows more pictures to be saved. The compression ratio is approximately 1:8.
PC	1024×768	1024×768	Suited to display on a computer monitor. The compression ratio is approximately 1:8.
VGA	640×480	640×480	Suited to full-screen display on a 4:3 television, or distribution by e-mail or the web. The compression ratio is approximately 1:8.
16:9	3968×2232	3968×2232	Pictures with an aspect ratio of 16:9 can be taken. The compression ratio is approximately 1:8.

The icon for the current setting is displayed in the monitor in shooting and playback modes (\square 6, 7).

Image mode

- If the image mode setting is changed, the new image mode setting is also applied to other shooting modes (except movie mode).
- This feature cannot be used simultaneously with certain features. → "Camera Settings that Cannot Be Set at the Same Time" (□ 78).

Number of Exposures Remaining

The following table lists the approximate number of pictures that can be stored in internal memory and on a 4 GB memory card. Note that the number of pictures that can be stored will differ depending on the composition of the picture (due to JPEG compression). In addition, this number may differ depending on the make of memory card, even if the capacity for the memory card is the same.

Image mode		Internal memory (Approx. 17 MB)	Memory card *1 (4 GB)	Print size (printed at 300 dpi; cm/in.)*2
45	4320×3240★	2	430	36 × 27/14 × 10.5
14 _M	4320×3240 (default setting)	4	860	36 × 27/14 × 10.5
8м	3264×2448	7	1520	28 × 21/11 × 8
5м	2592×1944	11	2410	22 × 16/8.5 × 6.5
Зм	2048×1536	17	3860	17 × 13/7 × 5
PC	1024×768	51	11000	9 × 7/3.5 × 2.5
VGA	640×480	82	17700	5 × 4/2 × 1.5
16:9	3968×2232	6	1370	34 × 19/13 × 7.5

^{*1} If the number of exposures remaining is 10,000 or more, the number of exposures remaining display shows **9999**.

Print sizes are calculated by dividing the number of pixels by printer resolution (dpi) and multiplying by 2.54 cm (1 in.). However, at the same image size, pictures printed at higher resolutions will print smaller than the size indicated, and those printed at lower resolutions will print larger than the size indicated.

^{*2} When the printer resolution is set to 300 dpi.

WB White Balance

The color of light reflected from an object varies with the color of the light source. The human brain is able to adapt to changes in the color of the light source, with the result that white objects appear white whether seen in the shade, direct sunlight, or under incandescent lighting. Digital cameras can mimic this adjustment by processing images according to the color of the light source. This is known as "white balance."

Although the default setting, **Auto** can be used under most types of lighting, you can apply the white balance setting suited to a particular light source to achieve more accurate results.

AUTO Auto (default setting)

White balance automatically adjusted to suit lighting conditions. Best choice in most situations.

PRE Preset manual

Neutral-colored object used as reference to set white balance under unusual lighting conditions. Please refer to "Preset Manual" for more information (75).

Daylight

White balance adjusted for direct sunlight.

Use under incandescent lighting.

₩ Fluorescent

Use under most types of fluorescent lighting.

6 Cloudy

Use when taking pictures under overcast skies.

多 Flash

Use with the flash mode.

The effects of the selected option can be previewed in the monitor. At settings other than **Auto**, the icon for the current setting is displayed on the monitor (\square 6).

White Balance

- This feature cannot be used simultaneously with certain features. → "Camera Settings that Cannot Be Set at the Same Time" (□ 78)
- At white-balance settings other than **Auto** or **Flash**, turn the flash off (**9**) (28).

Preset Manual

Preset manual is used with mixed lighting or to compensate for light sources with a strong color cast (for example, to make pictures taken under a lamp with a red shade look as though they had been taken under white light).

- Place a white or gray reference object under the lighting that will be used during shooting.
- 2 Display the shooting menu (71), use the multi selector to set White balance to PRE Preset manual, then press .

The camera zooms in.

 


3 Choose **Measure**.

To apply the most recently measured value for preset manual, choose **Cancel** and press 8.



4 Frame the reference object.



Reference object frame

5 Press **®**.

The shutter is released and the new white balance value is set (no picture is recorded).

Note on Preset Manual

The camera cannot measure a white balance value for when the flash fires. When shooting with the flash, set **White balance** to **Auto** or **Flash**.

□ Continuous

Set ▲ (Auto) mode (Д 27) → MENU (shooting menu) → Ц Continuous

Change settings to Continuous or BSS (best shot selector).

Flash will be switched off for **Continuous**, **BSS** or **Multi-shot 16**, and focus, exposure and white balance are fixed at the values for the first picture in each series.

Single (default setting)

One shot is taken each time shutter-release button is pressed.

Continuous

While the shutter-release button is held down all the way, the camera shoots up to three images at a rate of about 0.7 frames per second (fps) (when image mode is set to 4320 x 3240).

BSS BSS (Best Shot Selector)

The "best shot selector" is recommended when shooting with the flash off or the camera zoomed in, or in other situations in which inadvertent motion can result in blurred pictures.

When BSS is on, the camera takes up to 10 pictures while the shutter-release button is held down. The sharpest picture in the series is automatically selected and saved.

Multi-shot 16

Each time the shutter-release button is pressed all the way down, 16 pictures are shot at about 30 frames per second (fps) and the camera arranges them in a single picture. Images are captured with the image mode fixed at (image size is 2560×1920).

Digital zoom cannot be applied.



The icon for the current setting is displayed in the monitor when the camera is in shooting mode (\square 6). No icon is displayed when **Single** is selected.

Note on Continuous Shooting

- The maximum frame rate with continuous shooting may vary, depending upon the current image mode setting, the memory card used, and shooting conditions.
- This feature cannot be used simultaneously with certain features. → "Camera Settings that Cannot Be Set at the Same Time" (◯ 78)

Note on BSS

BSS is best suited to situations where the subject is not moving. **BSS** may not produce the desired results if the subject moves or if the composition is changed while the shutter-release button is pressed all the way down.

Note on Multi-shot 16

Smear (\square 114) visible in the monitor when shooting with **Multi-shot 16** is visible in the saved image. Avoiding bright objects such as the sun, reflections of the sun, and electric lights is recommended to avoid smear effects.

Color Options

Set lacktriangle (Auto) mode (\Box 27) \Rightarrow MENU (shooting menu) \Rightarrow r Color Options

Make colors more vivid or record pictures in monochrome.

Standard color (default setting)

Use for pictures exhibiting natural color.

🕅 Vivid color

Use to achieve a vivid, "photoprint" effect.

Black-and-white

Record pictures in black-and-white.

€ Sepia

Record pictures in sepia tones.

C Cyanotype

Record pictures in cyan-blue monochrome.

The icon for the current setting is displayed in the monitor when the camera is in shooting mode (\square 6). No icon is displayed when **Standard color** is selected. The effects of the current setting can be previewed in the monitor.

Camera Settings that Cannot Be Set at the Same Time

Certain settings in the shooting menu cannot be used with other functions.

Restricted Functions	Setting	Description
Flash mode	Continuous (CC 76)	If set to Continuous , BSS , or Multi-shot 16 , the flash cannot be used.
Digital zoom	Continuous (CC 76)	When using Multi-shot 16 , the digital zoom cannot be used.
Image mode	Continuous (🕮 76)	When using Multi-shot 16, Image mode is fixed at 1 (image size is 2560×1920).
Continuous	Self-timer (30)	When using the self-timer, the setting is fixed at Single .
White balance	Color options (🕮 77)	When using Black-and-white, Sepia, or Cyanotype, the White balance setting is fixed at Auto.
Motion detection	Continuous (CC 76)	When Multi-shot 16 is selected, Motion detection is not enabled.


Playback Options: The Playback Menu

The following functions are available in playback mode.

	D-Lighting	 50
	Enhances brightness and contrast in dark portions of pictures.	
4	Print set	1 68
	Select pictures to print and the number of copies for each.	
	Slide show	1 81
	View pictures stored in the internal memory or on a memory card in an auslide show.	tomatic
ú	Delete	1 82
	Delete pictures. Multiple pictures can be deleted with one operation.	
	Small picture	 51
	Create a small copy of the current picture.	

Displaying the Playback Menu

 Press to enter playback mode (24). Display the playback menu by pressing **MENU**.



- Use the multi selector to choose and apply settings (\square 9).
- To exit the playback menu, press **MENU**.

Selecting Multiple Pictures

The screen shown at right will be displayed in the menus (shown below) when choosing pictures.

Playback menu: Print set: **Select images** (QQ 68)

Delete: Erase selected images

 $(\square 82)$

Setup menu: Welcome screen: Select an image

(86)

Protect (104)
Rotate image (105)

Copy: Selected images (106)

Follow the procedure described below to choose the pictures.

1 Press the multi selector

or

to choose the desired picture.

Only one picture can be selected for **Rotate image** and **Welcome screen**. Proceed to step 3.

Rotate the zoom control to $\mathbf{T}(\mathbf{Q})$ to switch to full-frame playback. Rotate the zoom control to $\mathbf{W}(\mathbf{\Xi})$ to switch back to thumbnail display.



rase selected images

2 Press ▲ or ▼ to select **ON** or **OFF** (or the number of copies).



3 To fix the selection of pictures, press **®**.

□ Slide Show

Press ▶ (playback mode) → MENU (playback menu) → 및 Slide show

View pictures stored in the internal memory or on a memory card in an automatic slide show.

1 Use the multi selector to choose **Start** and press **®**.

To repeat the slide show automatically, enable **Loop** and press **®** before choosing **Start**. The check mark (**>**) will be added to the loop option when enabled.



The slide show begins.

 
While the slide show is in progress, the following operations can be performed:

- Press **®** to pause the slide show.



3 Choose End or Restart.

When the slide show ends or is paused, choose **End** and press **®** to return to the playback menu, or choose **Restart** to play the slide show again.



Notes on Slide Show

- Only the first frame of movies (QQ 55) included in slide shows is displayed.
- Even if **Loop** is selected, the monitor can continuously display the Slide Show for up to 30 minutes (97).

Playback Options: The Playback Menu

₩ Delete

Press ▶ (playback mode) → MENU (playback menu) → 🖆 Delete

Delete selected pictures or all pictures.

Erase selected images

Delete selected pictures. → "Selecting Multiple Pictures" (□ 80)

Erase all images

Delete all pictures.



- Once deleted, pictures cannot be recovered. Transfer important images to a computer before deletion.
- Pictures marked with the @= icon are protected and cannot be deleted (\square 104).

Basic Camera Setup: The Setup Menu

The setup menu contains the following settings.

<u>HEHÚ</u>	Menus	1 85
	Select the method for displaying menus.	
Ü	Welcome screen	1 86
	Specify the welcome screen displayed when the camera is turned on.	
(4)	Date	1 87
	Set camera clock and choose home and destination time zones.	
	Monitor settings	1 90
	Choose whether or not to display information in the monitor, whether pictures are shown on the display for review after taking them, and semonitor brightness.	
DATE	Date imprint	1 92
	Imprint the shooting date and time on pictures.	
	Electronic VR	1 93
	Specify the electronic vibration reduction setting for taking still pictur	es.
(e)	Motion detection	1 94
	Set whether or not the camera automatically increases the shutter spreduce blurring when motion is detected while shooting still pictures	
ED	AF assist	1 95
≣ D	AF assist Enable or disable AF-assist illumination.	95
■ D		□ 95□ 96
	Enable or disable AF-assist illumination.	
	Enable or disable AF-assist illumination. Sound settings	
◆ ≫	Enable or disable AF-assist illumination. Sound settings Adjust sound settings.	QQ 96
◆ ≫	Enable or disable AF-assist illumination. Sound settings Adjust sound settings. Auto off	QQ 96
◆ >	Enable or disable AF-assist illumination. Sound settings Adjust sound settings. Auto off Set time before camera enters standby mode to conserve power.	☐ 96 ☐ 97
◆ >	Enable or disable AF-assist illumination. Sound settings Adjust sound settings. Auto off Set time before camera enters standby mode to conserve power. Format memory/Format card	☐ 96 ☐ 97
◆◆◆<!--</th--><th>Enable or disable AF-assist illumination. Sound settings Adjust sound settings. Auto off Set time before camera enters standby mode to conserve power. Format memory/Format card Format internal memory or memory card.</th><th>Д 96 Д 97 Д 98</th>	Enable or disable AF-assist illumination. Sound settings Adjust sound settings. Auto off Set time before camera enters standby mode to conserve power. Format memory/Format card Format internal memory or memory card.	Д 96 Д 97 Д 98
◆◆◆<!--</th--><th>Enable or disable AF-assist illumination. Sound settings Adjust sound settings. Auto off Set time before camera enters standby mode to conserve power. Format memory/Format card Format internal memory or memory card. Language</th><th>Д 96 Д 97 Д 98</th>	Enable or disable AF-assist illumination. Sound settings Adjust sound settings. Auto off Set time before camera enters standby mode to conserve power. Format memory/Format card Format internal memory or memory card. Language	Д 96 Д 97 Д 98
	Enable or disable AF-assist illumination. Sound settings Adjust sound settings. Auto off Set time before camera enters standby mode to conserve power. Format memory/Format card Format internal memory or memory card. Language Choose the language used for camera monitor display.	П 96 П 97 П 98 П 99
	Enable or disable AF-assist illumination. Sound settings Adjust sound settings. Auto off Set time before camera enters standby mode to conserve power. Format memory/Format card Format internal memory or memory card. Language Choose the language used for camera monitor display. Video mode	П 96 П 97 П 98 П 99
♣»♦)♠MDEO	Enable or disable AF-assist illumination. Sound settings Adjust sound settings. Auto off Set time before camera enters standby mode to conserve power. Format memory/Format card Format internal memory or memory card. Language Choose the language used for camera monitor display. Video mode Adjust settings for connection to a television.	☐ 96 ☐ 97 ☐ 98 ☐ 99 ☐ 99
♣»♦)♠MDEO	Enable or disable AF-assist illumination. Sound settings Adjust sound settings. Auto off Set time before camera enters standby mode to conserve power. Format memory/Format card Format internal memory or memory card. Language Choose the language used for camera monitor display. Video mode Adjust settings for connection to a television. Blink warning Set whether or not to detect human subjects with eyes closed when	☐ 96 ☐ 97 ☐ 98 ☐ 99 ☐ 99
◆>◆>MDEO	Enable or disable AF-assist illumination. Sound settings Adjust sound settings. Auto off Set time before camera enters standby mode to conserve power. Format memory/Format card Format internal memory or memory card. Language Choose the language used for camera monitor display. Video mode Adjust settings for connection to a television. Blink warning Set whether or not to detect human subjects with eyes closed when pictures using face detection.	☐ 96 ☐ 97 ☐ 98 ☐ 99 ☐ 99 ☐ 100 shooting

8	Battery type	103
	Select the type of batteries used.	
Оп	Protect	1 04
	Protect selected pictures from accidental deletion.	
4	Rotate image	1 05
	Change the orientation of a picture.	
Œ	Сору	1 06
	Copy files between memory card and internal memory.	
Ver	Firmware version	1 07
	Display camera firmware version.	

Displaying the Setup Menu

Display the menu screen and select **Y** (Setup).

1 Press **MENU** to display the menu screen.

When using easy auto mode, scene mode, smart portrait mode, or movie mode, press ◀ on the multi selector (□ 9) to display the tab.





2 Press the multi selector ◀ to enter the menu.
You can now select a tab.



3 Press **△** or **▼** to select the **♀** tab.





You can now select an item from the setup menu.

Use the multi selector to choose and apply settings (\square 9).

To exit the setup menu, press the **MENU** or press ◀ and select another tab.



Menus

Press MENU → Y (setup menu) (□ 84) → Menus

Select the method for displaying menus.

Text (default setting)

Menus are displayed in list format.



Icons

All menu items can be displayed in a single page.

Menu names



I□ Welcome Screen

Press MENU → Y (setup menu) (□ 84) → □ Welcome screen

Specify the welcome screen displayed when the camera is turned on.

None (default setting)

The welcome screen is not displayed when the camera is turned on; the shooting mode or playback mode screen is displayed.

COOLPIX

The welcome screen is displayed when the camera is turned on, then the shooting mode or playback mode screen is displayed.

Select an image

An image captured with this camera is used as the welcome screen. When the image selection screen is displayed (\square 80), select the desired image and press \bigcirc to register the image as the welcome screen.

- As the selected image is stored in the camera, the image will appear in the welcome screen even if the original picture is deleted.
- Pictures taken at an Image mode setting (☐ 72) of ☑ 3968×2232, as well as pictures that are 320×240 or smaller after being edited using small picture (☐ 51) or crop (☐ 52), cannot be used.

① Date

Press MENU → Y (setup menu) (□ 84) → ② Date

Set the camera clock.

Date

Set camera clock to current date and time.

Use the multi selector to set the date and time.

- Edit the highlighted item: Press ▲ or ▼.
- Finish setting: After selecting the order in which the day, month, and year are displayed, press (11) 14).

Time zone

Set the home $(\stackrel{\bullet}{\mathbf{L}})$ time zone (district) or daylight saving time. When the destination $(\stackrel{\bullet}{\mathcal{L}})$ time zone is selected, the time difference $(\stackrel{\bullet}{\square})$ 89) is automatically calculated and the date and time in the selected region are recorded. Useful when travelling.

Setting Travel Destination Time Zone

1 Use the multi selector to choose **Time zone** and press **®**.

The **Time zone** menu is displayed.



2 Choose **→ Travel destination** and press **®**.

The date and time displayed on the monitor changes according to the region currently selected.



3 Press ▶.

The new city time zone menu is displayed.



4 Press **◄** or **▶** to select the travel destination region (time zone).

When using the camera in an area where daylight saving time is in effect, press \triangle to adjust the camera's time for daylight saving time. a will be displayed in the top of the monitor and the time will advance one hour. To turn off the daylight saving time setting, press \blacktriangledown .



Press (R) to enter the travel destination.

While the travel destination time zone is selected, the \$\frac{1}{2}\$ icon will be displayed in the monitor when the camera is in shooting mode.

The Clock Battery

The camera's clock is powered by a clock battery that is independent of the batteries that powers the camera. The clock battery charges when the main batteries are installed or an AC adapter is connected, and can provide several days of backup power after about ten hours of charging.

(Home Time Zone)

- To switch to the home time zone, choose ♠ in step 2 and press ๋ .

Daylight Saving Time

When the summer saving time begins or ends, turn the daylight saving time option on or off using the home time zone display in Step 4.

Imprinting the Date on Pictures

After setting the date and time, set the **Date imprint** setting in the setup menu (\square 92). Once **Date imprint** is set, the shooting date and time can be imprinted on the image data when taking pictures.

Time Zones

The camera supports the time zones listed below.

For time zones not listed below, set the camera's clock manually to local time using **Date** in the setup menu.

UTC +/-	Time zone	UTC +/-	Time zone
-11	Midway, Samoa	+1	Madrid, Paris, Berlin
-10	Hawaii, Tahiti	+2	Athens, Helsinki, Ankara
-9	Alaska, Anchorage	+3	Moscow, Nairobi, Riyadh, Kuwait, Manama
-8	PST (PDT): Los Angeles, Seattle, Vancouver	+4	Abu Dhabi, Dubai
-7	MST (MDT): Denver, Phoenix, La Paz	+5	Islamabad, Karachi
-6	CST (CDT): Chicago, Houston, Mexico City	+5.5	New Delhi
-5	EST (EDT): New York, Toronto, Lima	+6	Colombo, Dhaka
-4.5	Caracas	+7	Bangkok, Jakarta
-4	Manaus	+8	Beijing, Hong Kong, Singapore
-3	Buenos Aires, Sao Paulo	+9	Tokyo, Seoul
-2	Fernando de Noronha	+10	Sydney, Guam
-1	Azores	+11	New Caledonia
±0	London, Casablanca	+12	Auckland, Fiji

□ Monitor Settings

Press MENU → Y (setup menu) (□ 84) → □ Monitor settings

The following settings are available.

Photo info

Choose information displayed in monitor during shooting and playback mode. $\rightarrow \bigcirc$ 91

Image review

- **On** (default setting): Pictures are automatically displayed briefly immediately after shooting.
- Off: Pictures are not displayed after shooting.

Brightness

Choose from five settings for monitor brightness. The default setting is 3.

Photo Info

Select whether or not photo info is displayed.

See "The Monitor" (\square 6, 7) for information on indicators in the monitor.

	Shooting mode	Playback mode
Show info	6 ⁹	15/05/2011 15:30 0004.JPG
Auto info (default setting)	The same information as in Show in performed after a few seconds, the c info . The information is displayed as performed.	display will be the same as Hide
Hide info		
Framing grid	In the following shooting modes, a framing grid appears to help frame pictures, in addition to the information displayed in Auto info . Easy auto mode Auto mode In other shooting modes, the same information as in Auto info is displayed.	The current settings or operation guide is displayed, as in Auto info above.

Date Imprint

Imprint the shooting date and time on pictures. Date can be printed from printers that do not support the date imprinting (\square 69).



Off (default setting)

Date and time are not imprinted on pictures.

Date

The date is imprinted in the bottom right corner of pictures.

Date and time

The date and time is imprinted in the bottom right corner of pictures.

At settings other than **Off**, the icon for the current setting is displayed in the monitor $(\square \square 6)$.

Date Imprint

- Imprinted dates form a permanent part of image data and cannot be deleted.
- · Date imprint is disabled in the following situations.
 - When using the **Panorama assist** scene mode
 - When using movie mode
- Dates imprinted at an Image mode setting (T2) of 640×480 may be difficult to read.
 Choose 10124×768 or larger when using date imprint.
- The date is recorded using the format selected in the setup menu's **Date** item (14, 87).

Date Imprint and Print Set

When pictures are printed from DPOF-compatible printers that can print date and photo information, you can use **Print Set** (\square 68) and print the shooting date and photo information on the pictures. In such a case, it is unnecessary to imprint date and time on pictures beforehand using

Electronic VR

Press the MENU button → Y (Setup menu) (□ 83) → (□ Electronic VR

Choose whether to use electronic VR (vibration reduction) when taking still pictures.

Auto

When all of the following conditions are met while taking still pictures, electronic VR is applied and the effects of camera shake are reduced.

- The flash is turned off or set to slow sync mode.
- The shutter speed is slow.
- The Continuous setting is set to Single.
- When the subject is dark.

Off (default setting)

Electronic VR is disabled.

When **Auto** is selected, **@** appears on the monitor (\square 6), and electronic VR is applied depending on shooting conditions.

Notes on Electronic Vibration Reduction

- Electronic VR is disabled while the flash is used, except when using slow sync mode. Note that Electronic VR is disabled even when flash mode is slow sync with red-eye reduction (35, 36).
- If the exposure period exceeds a certain period of time, **Electronic VR** will not function.
- Electronic VR cannot be used when using the following scene modes.
 - Sports (22 35)
 - Night portrait (QQ 35)
 - Dusk/dawn (QQ 37)
 - Night landscape (QQ 37)
 - Museum (38)
 - Fireworks show (QQ 39)
 - Backlight (QQ 39)
- The effectiveness of **Electronic VR** decreases as camera shake increases.
- Pictures taken using motion detection may be somewhat grainy.

Motion Detection

Press MENU \rightarrow Y (setup menu) (\square 84) \rightarrow \bigcirc Motion detection

Set whether or not the camera automatically increases the shutter speed to reduce blurring when motion is detected while shooting still pictures.

Auto (default setting)

In order to reduce the effects of camera shake or subject movement, ISO sensitivity and shutter speed are increased when the camera detects camera shake or subject movement.

However, motion detection does not function in the following situations.

- When flash mode is set to **\$** (fill flash)
- When Multi-shot 16 (□ 76) is selected.
- When scene mode is set to Night portrait (\$\sum_3\$), Dusk/dawn (\$\sum_3\$), Fireworks show (\$\sum_3\$) or Backlight (\$\sum_3\$)

Off

Motion detection is not enabled.

The icon for the current setting is displayed in the monitor when the camera is in shooting mode (\square 19). When the camera detects shaking and increases shutter speed, the motion detection indicator turns green. No icon is displayed when **Off** is selected.

Notes on Motion Detection

- Blurring caused by camera shake or subject movement may not be eliminated in some situations.
- Motion detection may not function if camera shake or subject movement is excessive, or if there is insufficient lighting.
- The pictures taken may become somewhat grainy.

ID AF Assist

Press MENU → ¥ (setup menu) (□ 84) → ■ AF assist

Change settings for AF-assist illumination.

Auto (default setting)

AF-assist illumination will be used to assist the focus operation when the subject is poorly lit. The illuminator has a range of about 1.9 m (6 ft. 3 in.) at the maximum wide-angle position and 1.1 m (3 ft. 7 in.) at the maximum telescopic position. However, the AF-assist illumination will not turn on in some scene modes even if **Auto** is selected (A4-39).

Off

Disable this function. The camera may be unable to focus if lighting is poor.

Sound Settings

Press MENU → Y (setup menu) (□ 84) → ♦ Sound settings

Adjust the following sound settings.

Button sound

Turn the button sound **On** or **Off**. When **On** (default setting) is selected, a beep will sound once when operations are completed successfully, two times when the focus has been locked, and three times when an error is detected, and welcome sound is played when the camera is turned on.

Shutter sound

Choose shutter sound from **On** (default setting) or **Off**. Even when set to **On**, the shutter sound is not heard in the following situations.

- When using Continuous, BSS, or Multi-shot 16
- When using Sports or Museum
- · When shooting movies

(ii) Auto Off

Press MENU → ¥ (setup menu) (□ 84) → ② Auto off

When the camera is on and a period of time passes without any operations, the camera will enter the standby mode (\square 13) to save power.

When the camera enters standby mode, the power-on lamp flashes. If no operations are performed within three minutes, the camera turns off.

Use this option to set the amount of time that passes before the camera enters standby mode.

Auto off

Choose the time allowed to elapse before the camera enters standby mode if no operations are performed from **30 s** (default setting), **1 min**, **5 min**, and **30 min**.

Sleep Mode

If **On** (default setting) is selected, the camera will enter standby mode when there is no change in the brightness of the subject, even before the time selected in the auto off menu has elapsed. The camera will enter sleep mode after 30 seconds when **Auto off** is set to **1 min** or less, or after 1 minute when **Auto off** is set to **5 min** or more.

Notes on Auto Off

The time allowed to elapse before the camera enters standby mode is fixed in the following cases:

- While menus are displayed: 3 minutes
- While slide show is in progress: Up to 30 minutes

Canceling Standby Mode

Cancel standby mode and reactivate the monitor by pressing any of the following buttons.

- Power switch
- · Shutter-release button
- n button
- ▶ button

I Format Memory/ ☐ Format Card

Press MENU \rightarrow Y (setup menu) (\square 84) \rightarrow N Format memory/ Format card

Use this option to format the internal memory or a memory card.

Formatting Internal Memory

To format the internal memory, remove the memory card from the camera.

The **Format memory** option appears in the setup menu.

Format memory All images will be deleted! OK? Format No

Formatting a Memory Card

When the memory card is inserted in the camera, the **Format card** option appears in the setup menu.



Formatting Internal Memory and Memory Cards

- Formatting the internal memory or memory cards permanently deletes all data. Be sure to transfer important pictures to a computer before formatting.
- Do not turn the camera off or open the battery-chamber/memory card slot cover during formatting.
- The first time you insert the memory cards used in other devices into this camera, be sure to format them using this camera.

▶ Language

Press MENU → ¥ (setup menu) (□ 84) → ► Language

Select the language used for camera monitor display.

Čeština	Czech	
Dansk	Danish	
Deutsch	German	
English	(default setting)	
Español	Spanish	
Ελληνικά	Greek	
Français	French	
Indonesia	Indonesian	
Italiano	Italian	
Magyar	Hungarian	
Nederlands	Dutch	
Norsk	Norwegian	

Polish
Portuguese
Russian
Finnish
Swedish
Turkish
Arabic
Simplified Chinese
Traditional Chinese
Japanese
Korean
Thai

VDEO Wode

Press MENU \rightarrow Y (setup menu) (\square 84) \rightarrow VIDEO Video mode

Adjust settings for connection to a television. Choose from **NTSC** and **PAL**.

Blink Warning

Press MENU → ¥ (setup menu) (□ 84) → ☑ Blink warning

Choose whether or not blinking eyes are detected when using face detection $(\square 22)$ in the following shooting modes.

- 🏅 (easy auto) mode
- Portrait (34) and Night portrait (35) scene modes

On

When the camera detects that one or more human subjects have closed their eyes shortly after recognizing the faces and shooting them, the **Did someone blink?** screen will appear on the monitor. The face of the human subject that may have closed his/her eyes is framed by a yellow border. In such a case, you can check the shot picture and determine if you take the picture again.

"Operating the Did someone blink? Screen" (

100) 100)

Off (default setting)

Blink warning doesn't take effect.

Operating the Did someone blink? Screen

The following operations are available while the **Did someone blink?** screen is displayed.

If no operations are performed for a few seconds, the screen automatically returns to the shooting mode screen.



То	Use	Description
Enlarge and display the face of the person who blinked	T (9)	Rotate the zoom control to $\mathbf{T}(\mathbf{Q})$.
Switch to full-frame playback	W (E	Rotate the zoom control to W ().
Select the face to be displayed	(S)	If the camera detects more than one human subjects with their eyes closed, press
Delete the shot picture	Ó	Press 📆.
	®	
Switch to shooting mode	↓	Press 🚱 or the shutter-release button.

Reset All

Press $\texttt{MENU} \rightarrow \texttt{Y}$ (setup menu) (\square 84) $\rightarrow \blacksquare$ Reset all

When **Reset** is selected, the camera's settings will be restored to their default values.

Pop-up Menu

Option	Default value
Flash mode (28)	Auto
Self-timer (QQ 30)	Off
Macro mode (31)	Off
Exposure compensation (32)	0.0

Scene mode

Option	Default value
Scene mode (QQ 33)	Portrait
Hue adjustment in food mode (41)	Center

Movie Menu

Option	Default value
Movie options (QQ 54)	TV movie 640

Shooting Menu

Option	Default value
Image mode (QQ 72)	4320 ×3240 4320 ×3240
White balance (QQ 74)	Auto
Continuous (QQ 76)	Single
Color options (77)	Standard color

Setup Menu

Option	Default value
Menus (\$\infty\$ 85)	Text
Welcome screen (\$\simeq\$ 86)	None
Photo info (90)	Auto info
Image review (QQ 90)	On
Brightness (90)	3
Date imprint (92)	Off
Electronic VR (QQ 93)	Off
Motion detection (94)	Auto
AF assist (QQ 95)	Auto
Button sound (96)	On
Shutter sound (QQ 96)	On
Auto off (97)	30 s
Sleep mode (QQ 97)	On
Blink warning (100)	Off

Others

Option	Default value
Paper size (QQ 64, 65)	Default

- Choosing Reset all also clears the current file number (
 110) from the memory. Numbering will continue from the lowest number available. To reset file numbering to "0001", delete all pictures (
 82) before selecting Reset all.
- The following settings in the menus will remain unaffected even if Reset all is performed.

Shooting menu:

Preset manual in the **White balance** menu (75)

Setup menu:

Settings for picture registered for **Welcome screen** (\square 86), **Date** (\square 87),

Language (99), Video mode (99), and Battery type (103)

温 Battery Type

U → Y (setup menu) (□ 84) → 🖁 Battery type
--

To ensure that the camera shows the correct battery level (\square 18), choose the type that matches the batteries currently in use.

Alkaline (default setting)	LR6/L40 (AA-size) Alkaline batteries	
COOLPIX (Ni-MH)	Nikon EN-MH2 Ni-MH (nickel metal hydride) rechargeable batteries	
Lithium	FR6/L91 (AA-size) lithium batteries	

On Protect

Press MENU \rightarrow Y (setup menu) (\square 84) \rightarrow \bigcirc n Protect	

Protect selected pictures from accidental deletion. You can turn protection on and off for images selected in the picture selection screen. \rightarrow "Selecting Multiple Pictures" (\square 80)

Note, however, that formatting the camera's internal memory or the memory card will permanently erase protected files (\square 98).

Protected pictures are recognized by the \odot icon (\square 7, 46) in playback mode.

4 Rotate Image

Press MENU → ¥ (setup menu) (□ 84) → 🖼 Rotate image

Set the picture orientation (vertical or horizontal frame) displayed on the camera monitor after the pictures are taken.

Pictures can be rotated 90° clockwise or counterclockwise.

Pictures that were recorded in the portrait (vertical) orientation can be rotated up to 180° in either direction.

Select a picture in the picture selection screen (\square 80), and press \odot to display the Rotate image screen. Press the multi selector \triangleleft or \triangleright to rotate the picture 90°.



Press **®** to select the displayed direction and the vertical / horizontal position data will be recorded on the picture.

⊞ Copy

Press MENU → Y (setup menu) (□ 84) → 日 Copy

Copy pictures between the internal memory and a memory card.

1 Select an option from the copy screen using the multi selector and press **®**.

☐ → ■: Copy pictures from memory card to internal memory.

2 Choose the copy option and press **®**.

Selected images: Copy pictures selected from the

picture selection screen (80).

All images: Copy all pictures.



Notes on Copying Pictures

- JPEG- and AVI-format files can be copied. Files recorded in any other format cannot be copied.
- Pictures taken with another make of camera or that have been modified on a computer cannot be copied.
- Edited copies have the same protection marking (\$\sum\$ 104) as the original, but are not marked for printing (\$\sum\$ 68).



Ver Firmware Version

Press MENU → Y (setup menu) (□ 84) → Ver Firmware version

View the current camera firmware version.



Optional Accessories

Rechargeable battery	Rechargeable Ni-MH batteries EN-MH2-B2 (set of two EN-MH2 batteries)* ¹ Rechargeable Ni-MH batteries EN-MH2-B4 (set of four EN-MH2 batteries)* ¹		
Battery charger	Battery Charger MH-72 (includes two rechargeable Ni-MH batteries EN-MH2)* ¹ Battery Charger MH-73 (includes four rechargeable Ni-MH batteries EN-MH2)* ¹		
AC adapter	AC Adapter EH-65A < How to attach EH-65A> AC Adapter EH-62B cannot be used.		
USB Cable	USB Cable UC-E6		
AV Cable	Audio/Video Cable EG-CP14		

 $^{^{\}ast 1}$ To charge EN-MH2 batteries, use only Battery Charger MH-72 or MH-73. Do not use these battery chargers to charge any other type of battery.

Approved Memory Cards

The following Secure Digital (SD) memory cards have been tested and approved for use in this camera.

Memory cards with an SD Speed Class rating of 6 or faster are recommended for recording movies. Movie recording may stop unexpectedly when memory cards with a lower Speed Class rating are used.

	SD memory card	SDHC memory card ²	SDXC memory card ³
SanDisk	2 GB ¹	4 GB, 8 GB, 16 GB, 32 GB	64 GB
TOSHIBA	2 GB ¹	4 GB, 8 GB, 16 GB, 32 GB	64 GB
Panasonic	2 GB ¹	4 GB, 8 GB, 12 GB, 16 GB, 24 GB, 32 GB	48 GB, 64 GB
Lexar	2 GB ¹	4 GB, 8 GB, 16 GB, 32 GB	-

If the memory card will be used with a card reader or similar device, check that device supports 2 GB cards.

2 SDHC compliant. If the memory card will be used with a card reader or similar device, check that device supports SDHC.



3 SDXC compliant.


If the memory card will be used with a card reader or similar device, check that device supports SDXC.



• Contact the manufacturer for details on the above cards.

Image File and Folder Names

Pictures and movies are assigned file names as follows.

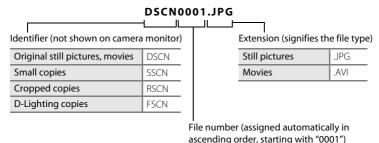

- pictures (e.g. "100NIKON"). When the number of files within a folder reaches 9999, a new folder will be created. File numbers will be assigned automatically starting with "0001."
- Files copied using Copy > Selected images are copied to the current folder, where they are assigned new file numbers in ascending order starting from the largest file number in memory. Copy > All images copies all folders from the source medium; file names do not change but new folder numbers are assigned in ascending order, starting from the largest folder number on the destination medium (106).
- Folders can hold up to 200 pictures; if a picture is taken when the current folder contains 200 pictures, a new folder will be created by adding one to the current folder number. If a picture is taken when the current folder is numbered 999 and contains 200 pictures or a picture numbered 9999, no further pictures can be taken until the medium is formatted (98) or a new memory card inserted.

Caring for the Camera

To ensure continued enjoyment of this Nikon product, observe the following precautions when using or storing the device:

Keep dry

The device will be damaged if immersed in water or subjected to high humidity.

Do not drop

The product may malfunction if subjected to strong shock or vibration.

Handle the lens and all moving parts with care

Do not apply force to the lens, lens cover, monitor, memory card slot or battery chamber. These parts are easily damaged. Applying force to the lens cover could result in camera malfunction or damage to the lens. Should the monitor break, care should be taken to avoid injury caused by broken glass and to prevent the liquid crystal from the display touching the skin or entering the eyes or mouth.

Do not point the lens at strong light sources for extended periods

Avoid pointing the lens at the sun or other strong light sources for extended periods when using or storing the camera. Intense light may cause deterioration of the image sensor, producing a white blur effect in photographs.

Keep away from strong magnetic fields

Do not use or store this device in the vicinity of equipment that generates strong electromagnetic radiation or magnetic fields. Strong static charges or the magnetic fields produced by equipment such as radio transmitters could interfere with the monitor, damage data stored on the memory card, or affect the product's internal circuitry.

Avoid sudden changes in temperature

Sudden changes in temperature, such as when entering or leaving a heated building on a cold day, can cause condensation to form inside the device. To prevent condensation, place the device in a carrying case or a plastic bag before exposing it to sudden changes in temperature.

Turn the product off before removing or disconnecting the power source

Do not remove the batteries while the product is on, or while images are being recorded or deleted. Forcibly cutting power in these circumstances could result in loss of data or in damage to product memory or internal circuitry.

Caring for the Camera

The Battery

- Check the battery level when taking the camera out, and replace the batteries if necessary (18). If possible, carry spare batteries when taking pictures on important occasions.
- When recharging rechargeable batteries, do not recharge batteries that contain a different amount of charge, or batteries of different model numbers.
- When charging EN-MH2 batteries using Battery Charger MH-72, charge two batteries at a time.
 When charging EN-MH2 batteries using Battery Charger MH-73, charge two or four batteries at a time. To charge EN-MH2 batteries, use only Battery Charger MH-72 or MH-73. Do not use these battery chargers to charge any other type of battery.
- Do not use any battery charger other than the MH-70/71 to recharge EN-MH1 batteries. Do not
 use the MH-70/71 to charge any batteries other than EN-MH1 batteries. Set the Battery type
 setting (103) to COOLPIX (Ni-MH).
- Battery capacity tends to decrease on cold days. Be sure that the batteries are fresh before heading
 outside to take pictures in cold weather. Keep spare batteries in a warm place and exchange as
 necessary. Once warmed, a cold battery may recover some of its charge.
- Dirt on the battery terminals can prevent the camera from functioning.
- Used batteries are a valuable resource. Please recycle used batteries in accordance with local regulations.

Cleaning

Lens	Avoid touching glass parts with your fingers. Remove dust or lint with a blower (typically a small device with a rubber bulb attached to one end that is pumped to produce a stream of air out the other end). To remove fingerprints or other stains that cannot be removed with a blower, wipe the lens with a soft cloth, using a spiral motion that starts at the center of the lens and working toward the edges. If this fails, clean the lens using a cloth lightly dampened with commercial lens cleaner.
Monitor	Remove dust or lint with a blower. To remove fingerprints and other stains, clean the monitor with a soft, dry cloth, being careful not to apply pressure.
Body	Use a blower to remove dust, dirt or sand, then wipe gently with a soft, dry cloth. After using the camera at the beach or seaside, wipe off any sand or salt with a dry cloth lightly dampened with fresh water, then dry thoroughly. Note that foreign matter inside the camera could cause damage not covered by the warranty.

Do not use alcohol, thinner, or other volatile chemicals.

Storage

Turn the camera off when not in use. Check that the power-on lamp is off before putting the camera away. Remove the batteries if the camera will not be used for an extended period. Do not store the camera with naphtha or camphor moth balls, or in any of the following locations:

- Next to equipment that produces strong electromagnetic fields, such as televisions or radios
- Exposed to temperatures below −10 °C (14 °F) or above 50 °C (122 °F)
- Poorly ventilated or subject to humidities of over 60%

To prevent mold or mildew, take the camera out of storage at least once a month. Turn the camera on and release the shutter a few times before putting the camera away again.

Notes on the Monitor

- The monitor may contain a few pixels that are always lit or that do not light. This is a characteristic common to all TFT LCD displays, and does not indicate a malfunction. Images recorded using the product will not be affected.
- When framing bright subjects, vertical comet-like streaks that whiten toward either end may
 appear in the display. This phenomenon, known as "smear", does not indicate a malfunction.
 In shooting modes other than movie mode, smear has no effect on the images that are recorded.
- Images in the monitor may be difficult to see under bright lighting.
- The monitor is lit by an LED backlight. Should the monitor begin to dim or flicker, contact your Nikon-authorized service representative.

Note on Smear

as the sun, reflected sunlight, and electric lights.

White or colored streaks may be visible when bright subjects are framed in the monitor. This phenomenon, known as "smear," occurs when extremely bright light strikes the image sensor; it is characteristic of image sensors and does not indicate a malfunction. Smear may also take the form of partial discoloration in the monitor during shooting. It does not appear in images recorded with the camera except in the cases of movies and of images recorded with **Multi-shot 16** selected for **Continuous**. When shooting in these modes, we recommend that you avoid bright subjects such

Error Messages

The following table lists the error messages and other warnings displayed in the monitor, as well as the solutions for dealing with them.

Display	Problem	Solution	ш
(blinks)	Clock not set.	Set clock.	87
包	Battery running low.	Prepare to change the batteries.	12, 103
t Battery exhausted.	Battery exhausted.	Replace batteries.	
Æ ● (blinks red)	Camera cannot focus.	Refocus. Use focus lock.	22, 23, 27
Please wait for the camera to finish recording.	Camera cannot perform other operations until recording is complete.	Wait until message clears from display automatically when recording is complete.	23
Memory card is write protected.	Write-protect switch is in "lock" position.	Slide write-protect switch to "write" position.	17
This card cannot be used.	Error accessing memory card.	Use approved card. Check that connectors are clean.	109 16
This card cannot be read.		Confirm that memory card is correctly inserted.	16
Card is not formatted. Format card? Yes No	Memory card has not been formatted for use in COOLPIX L24.	All data saved on the memory card will be deleted. If there is any data on the card that you want to keep, select No , and backup the data to a computer before formatting the memory card. To format the memory card, select Yes and press .	17
Out of memory.	Memory card is full.	Choose smaller image mode. Delete pictures. Insert new memory card. Remove memory card and use internal memory.	72 24, 55, 82 16 17

Display	Problem	Solution	
● Image cannot be	Error occurred while recording picture.	Format internal memory or memory card.	98
saved.	Camera has run out of file numbers.	Replace the memory card, or format the internal memory/memory card.	16 98
	Picture cannot be used for welcome screen.	The following pictures cannot be used. Pictures taken at an Image mode setting of 3968×2232 Pictures created using the small picture or crop functions that are 320 × 240 or smaller in size	51, 52, 72
	There is not enough memory to copy the picture.	Delete pictures from destination.	82
mage cannot be modified.	You are trying to edit a picture that cannot be edited.	Confirm the conditions that are required for editing.	49
Cannot record movie.	Time out error while recording movie.	Choose memory card with faster write speed.	16
Memory contains no images.	No pictures in the internal memory or memory card.	Remove memory card to play back pictures from internal memory.	17
File contains no image data.	File not created with COOLPIX L24.	File cannot be viewed on this camera. View file using the computer or any other devices which was used to create or edit this file.	-
This image cannot be deleted.	Picture is protected.	Disable protection.	104
Travel destination is in the current time zone.	Destination in same time zone as home.		87
Lens error	Lens error.	Turn camera off and then on again. If error persists, contact retailer or Nikon- authorized service representative.	18

Display	Problem	Solution	Image: section of the content of the
O Communications error	USB cable disconnected during printing.	Turn camera off, reconnect USB cable.	63
System error	Error has occurred in camera's internal circuitry.	Turn camera off, remove and reinsert batteries, and turn camera on. If error persists, contact retailer or Nikon-authorized service representative.	12, 18
Printer error: check printer status.	Running out of ink or printer error.	Check printer. After checking the ink or solving the problem, select Resume and press ® to resume printing.*	-
Off Printer error: check paper	Specified size of paper is not loaded in printer.	Load the specified paper, select Resume and press to resume printing.*	-
Off Printer error: paper jam	Paper has jammed in the printer.	Eject the jammed paper, select Resume and press to resume printing.*	-
Printer error: out of paper	No paper is loaded in printer.	Load the specified paper, select Resume and press to resume printing.*	-
Off Printer error: check ink	Ink error.	Check ink, select Resume and press (B) to resume printing.*	-
Printer error: out of ink	Ink cartridge is empty.	Replace ink, select Resume and press (B) to resume printing.*	_
Off Printer error: file corrupt	An error caused by the image file has occurred.	Select Cancel and press ® to cancel printing.	_

^{*} See the documentation provided with your printer for further guidance and information.

Troubleshooting

If the camera fails to function as expected, check the list of common problems below before consulting your retailer or Nikon-authorized service representative. Refer to the page numbers in the right-most column for more information.

Display, Settings and Power Supply

Problem	Cause/Solution	m
Monitor is blank	 Camera is off. Battery exhausted. Standby mode for saving power: press the shutter-release button halfway. When flash lamp blinks red, wait until flash has charged. Camera and computer are connected via USB cable. Camera and TV are connected via AV cable. 	18 18 13, 22 29 58 56
Monitor is hard to read	Adjust monitor brightness.Monitor is dirty. Clean monitor.	90 113
Camera turns off without warning	 Battery exhausted. Camera has turned off automatically to save power. Battery is cold. 	18 97 112
Date and time of recording are not correct	 Pictures taken while the clock is not set will have a time stamp of "00/00/0000 00:00" movies will be dated "01/ 01/2011 00:00." (The "Date not set" indicator blinks during shooting to indicate the clock is not set.) Set the correct date and time using Date in the setup menu. Check camera clock regularly against more accurate timepieces and reset as required. 	14
No indicators displayed in monitor	Hide info is selected for Photo info . Select Show info .	90
Date imprint not available	Camera clock has not been set.	14, 87
Date not appearing on pictures even when Date imprint is enabled	Date imprint is disabled in the following situations. • When the scene mode is set to Panorama assist • Movies	40 53
Camera settings reset	The clock battery is exhausted; all settings were restored to their default values.	88

Electronically Controlled Cameras

In extremely rare instances, unusual characters may appear in the monitor and the camera may stop functioning. In most cases, this phenomenon is caused by a strong external static charge. Turn the camera off, remove and replace the battery, then turn the camera on again. In the event of continued malfunction, contact your retailer or Nikon-authorized service representative. Note that disconnecting the power source as described above may result in the loss of any data not recorded to internal memory or the memory card at the time the problem occurred. Data already recorded will not be affected.

Shooting

Problem	Cause/Solution	
No picture taken when shutter- release button is pressed.	 When camera is in playback mode, press ♠. When menus are displayed, press MENU. Battery exhausted. When flash lamp blinks, flash is charging. 	8 10 18 29
Camera cannot focus.	The intended subject is one with which autofocus does not perform well. Set AF assist in the setup menu to Auto. Focus error. Turn camera off and then on again.	
Pictures are blurred.	Use flash. Use electronic vibration reduction or motion detection. Use BSS (Best Shot Selector). Use tripod and self-timer.	28 93, 94 76 5, 30
Bright specks appear in pictures taken with flash.	Flash is reflecting off particles in air. Turn flash off.	28
Flash does not fire.	 Flash is off. Some scene modes that cannot turn on flash are selected. Movie mode is selected. Continuous or Multi-shot 16 or BSS is selected for Continuous in shooting menu. 	28 33 53 76
Optical zoom cannot be used.	Optical zoom cannot be used while recording movies.	53

Troubleshooting

Problem	Cause/Solution	
Digital zoom cannot be used.	Digital zoom cannot be used in the following situations.	
	When Portrait or Night portrait is selected for Scene mode.	34, 35
	 When using smart portrait mode. Just before recording a movie (up to 2× can be 	44 53
	 applied while recording movies). When Multi-shot 16 is selected for Continuous. 	76
Image mode not available.	Image mode cannot be adjusted when Multi- shot 16 is selected for Continuous.	76
No sound when shutter is released.	Off is selected for Sound settings > Shutter sound in setup menu. Even when set to On, the shutter sound is not heard depending on the current shooting mode or settings. Do not block the speaker.	96
AF-assist illuminator does not light.	Off is selected for AF assist option in camera setup menu. AF-assist illuminator turns off automatically in some scene modes.	95 34-40
Pictures appear smeared.	Lens is dirty. Clean lens.	113
Hues are unnatural.	White balance does not match light source.	74
Randomly spaced bright pixels ("noise") appear in image.	The subject is dark, so shutter speed is too slow or ISO sensitivity is too high. Noise can be reduced by:	
	Using flash.	28
Pictures are too dark (underexposed).	 Flash is off. Flash window is blocked. Subject is beyond flash range. Adjust exposure compensation. Subject is backlit. Select the Backlight scene mode, or set the flash mode to \$\forall (fill flash). 	28 20 28 32 28, 39
Pictures are too bright (overexposed).	Adjust exposure compensation.	32

Problem	Cause/Solution	ш
Unexpected results when flash set to ★ (auto with red-eye reduction).	When taking pictures with �� (auto with redeye reduction), or when taking pictures with Night portrait (either in easy auto mode or the Night portrait scene mode) and the fill flash with slow sync and red-eye reduction is used, red-eye reduction may be applied, in rare cases, to areas not affected by red-eye. Use any auto mode or scene mode other than Night portrait, and change the flash to any other settings other than �� (auto with red-eye reduction) and try shooting again.	26, 28, 35

Playback

Problem	Cause/Solution	Щ
File cannot be played back.	File was overwritten or renamed by computer or other make of camera.	-
Cannot zoom in on picture.	Playback zoom cannot be used with movies, small pictures, or pictures that have been cropped to 320 × 240 or smaller.	-
Cannot use D-Lighting, small picture, or crop options.	These options cannot be used with movies. Pictures taken at an Image mode setting of 3968×2232 cannot be edited. Select picture that supports D-Lighting, small picture, or crop. Camera is unable to edit pictures taken with other cameras.	55 72 49 49
Pictures not displayed on television.	Choose correct Video mode. Memory card contains no pictures. Replace memory card. Remove memory card to play back pictures from internal memory.	99 16
Nikon Transfer 2 does not start when camera is connected.	Camera is off. Battery exhausted. USB cable is not correctly connected. Camera is not recognized by the computer. Computer is not set to launch Nikon Transfer 2 automatically. For more information about Nikon Transfer 2, refer to help information contained in ViewNX 2.	18 18 58 - -
Pictures to be printed are not displayed.	Memory card contains no pictures. Replace memory card. Remove memory card to print pictures from internal memory.	16

Troubleshooting

Problem	Cause/Solution	
Cannot select paper size with camera.	Even when using a PictBridge compatible printer, paper size cannot be selected from the camera in the following situations. Use the printer to select paper size. The printer does not support the paper sizes used by the camera. The printer automatically selects the paper size.	64, 65

Specifications

Nikon COOLPIX L24 Digital Camera

Туре	Compact digital camera		
Effective pixels	14.0 million		
Image sensor	1/2.3-in. type CCD; approx. 14.48 million total pixels		
Lens	3.6x optical zoom, NIKKOR lens		
Focal length	6.7-24.0mm (angle of view equivalent to that of 37-134 mm lens in 35mm [135] format)		
f/-number	f/3.1-6.7		
Construction	6 elements in 5 groups		
Digital zoom	Up to 4x (angle of view equivalent to that of approx. 536 mm lens in 35mm [135] format)		
Vibration reduction	Electronic VR		
Autofocus (AF)	Contrast-detect AF		
Focus range (from lens)	 Approx. 30 cm (1 ft.) to ∞ (W); approx. 70 cm (2 ft. 4 in.) to ∞ (T) Macro mode: 5 cm (2.0 in.) to ∞ (wide-angle position) 		
Focus-area selection	Center, face detection		
Monitor	7.5 cm (3-in.), approx. 230k-dot, TFT LCD with 5-level brightness adjustment		
Frame coverage (shooting mode)	Approx. 98% horizontal and 98% vertical (Compared to actual picture)		
Frame coverage (playback mode)	Approx. 100% horizontal and 100% vertical (Compared to actual picture)		
Storage			
Media	Internal memory (approx. 17 MB), SD/SDHC/SDXC memory card		
File system	DCF, Exif 2.2, and DPOF compliant		
File formats	Still pictures: JPEG Movies: AVI (Motion-JPEG compliant)		
Image size (pixels)	14M (High) [4320 x 3240★] 14M [4320 x 3240] 8M [3264 x 2448] 5M [2592 x 1944] 3M [2048 x 1536] PC [1024 x 768] VGA [640 x 480] 16:9 [3968 x 2232]		
ISO sensitivity (Standard output sensitivity)	Auto (ISO 80-1600)		

Exposure			
Metering	256-segment matrix, center-weighted (when using less than 2× digital zoom), spot (digital zoom 2× or more)		
Exposure control	Programmed auto exposure with motion detection and exposure compensation (-2.0 to $+2.0$ EV in steps of $1/3$ EV)		
Shutter	Mechanical and charge-coupled electronic shutter		
Speed	1/2000 - 1 s, 4 s (Fireworks show scene mode)		
Aperture	Electronically-controlled ND filter (-1.7 AV) selection		
Range	2 steps (f/3.1 and f/5.5 [W])		
Self-timer	Approx. 10 seconds		
Built-in flash			
Range (approx.)	[W]: 0.5 to 7.0 m (1 ft. 8 in. to 22 ft.), [T]: 0.5 to 3.0 m (1 ft. 8 in. to 9 ft. 10 in.)		
Flash control	TTL auto flash with monitor preflashes		
Interface	Hi-Speed USB		
Data transfer protocol	MTP, PTP		
Video output	Can be selected from NTSC and PAL		
I/O terminal	Audio video output/digital I/O (USB)		
Supported languages	Arabic, Chinese (Simplified and Traditional), Czech, Danish, Dutch, English, Finnish, French, Greek, German, Hungarian, Indonesian, Italian, Japanese, Korean, Polish, Portuguese, Norwegian, Russian, Spanish, Swedish, Thai, Turkish		
Power sources	Two LR6/L40 (AA-size) alkaline batteries Two FR6/L91 (AA-size) lithium batteries Two EN-MH2 rechargeable Ni-MH batteries (available separately) AC Adapter EH-65A (available separately)		
Battery life	 Still pictures*: Approx. 220 shots when using alkaline batteries Approx. 700 shots when using lithium batteries Approx. 450 shots when using EN-MH2 batteries Movies: Approx. 2 h 5 min when using alkaline batteries (TV movie 640) 		
	 Approx. 6 h 5 min when using lithium batteries (TV movie 640) Approx. 3 h 50 min when using EN-MH2 batteries (TV movie 640) 		
Tripod socket	1/4 (ISO 1222)		
Dimensions (W \times H \times D)	Approx. $97.7 \times 60.5 \times 28.3$ mm ($3.9 \times 2.4 \times 1.2$ in.) (excluding projections)		
Weight	Approx. 182 g (6.5 oz.) (including batteries and SD memory card)		

0	perating environment		
	Operating temperature	0 to 40°C (32 to 104°F)	
	Humidity	Less than 85% (no condensation)	

- Unless otherwise stated, all figures are for a camera with fully-charged EN-MH2 batteries operated at an ambient temperature of 25°C (77°F).
- * Based on Camera and Imaging Products Association (CIPA) standards for measuring the life of camera batteries. Measured at 23 (±2) °C (69 to 77°F); zoom adjusted with each shot, flash fired with every other shot, image mode set to May 4320 × 3240. Battery life may vary depending on shooting interval and length of time menus and images are displayed. Supplied batteries are for trial use only.



Supported Standards

- **DCF**: Design Rule for Camera File System is a standard widely used in the digital camera industry to ensure compatibility among different makes of camera.
- **DPOF**: Digital Print Order Format is an industry-wide standard that allows pictures to be printed from print orders stored on the memory card.
- Exif version 2.2: This camera supports Exif (Exchangeable Image File Format for Digital Still Cameras) version 2.2, a standard that allows information stored with photographs to be used for optimal color reproduction when images are output from Exif-compliant printers.
- **PictBridge**: A standard developed cooperatively by the digital camera and printer industries, allowing photographs to be output directly to a printer without connecting the camera to a computer.

Index

Symbols

(apply selection) button 5,9

▶ (Playback) button 5

▲ Auto mode 27

T Delete button 5, 24, 55

🖺 D-Lighting 50

Easy auto mode 18, 26

Electronic VR 93

Exposure compensation 32

Flash mode 28

Macro mode 31

MENU button 5, 10

₩ Movie mode 53

▶ Playback mode 24

Scene mode 33

Self-timer 30

Smart Portrait Mode 44

AE/AF-L 43

W button 4, 21, 25, 46, 47, 48

button 4, 21, 25, 46, 47, 48 T button 4, 11, 21, 25, 46, 47, 48

Q button 4, 11, 21, 25, 46, 47, 48

2 button 4, 11

Α

AC adapter 13, 108

AF-assist illumination 4, 23, 95

Alkaline 13

Alkaline batteries 12

Aperture 22

Audio Video/USB Cable 56, 63

Audio-in/Video-in jack 56

Auto flash 28

Auto off 13, 97

Autofocus 22, 23, 27, 31

AV Cable 56

AVI 110

<u>B</u>

Backlight 239 Batteries 12, 88 Battery level 18

Battery type 13, 103

Battery-chamber 5

Battery-chamber/memory card slot cover

5, 12, 16

Beach/snow 🌠 36

Best Shot Selector 76

Black-and-white 77

Blink warning 100

Brightness 90

BSS 76

Built-in microphone 4

Button sound 96

<u>C</u>

Calendar display 47

Close-up 🗱 38

Cloudy 74

Color options 77

Compression ratio 72

Computer 57

Continuous 76

Copy 39

Copying pictures 106

Crop 52

Cyanotype 77

<u>D</u>

Date 14, 87

Date imprint 92

Daylight 74

Daylight saving time 14,88

Delete 24, 25, 55, 82

Digital zoom 21

Direct print 62

D-Lighting 49, 50

DPOF 126

DPOF printing 67

DSCN 110

Dusk/dawn 📸 37

Ε J JPG 110 Easy auto mode 18, 26 EH-65A 13 EN-MH1 13, 108 Landscape 434 EN-MH2 12, 103, 108, 112 Language 99 Exposure compensation 32 Lens 4, 123 Extension 110 Lithium batteries 12 Eyelet for camera strap 4 M F Macro mode 31 File names 110 Memory capacity 18 Fill flash 28 Memory card 16, 109 Fireworks show 39 Memory card slot 5, 16 Firmware version 107 Menus 85 Flash 4, 28, 29 Monitor 5, 6, 113 Flash lamp 5, 29 Monitor settings 90 Flash off 28 Motion detection 94 Fluorescent 74 Movie menu 53, 54 Focus 11, 22 Movie playback 55 Focus lock 23, 27 Movie settings 54 Folder names 110 Multi selector 5, 9 Food **11** 38, 41 Multi-shot 16 76 Format 17, 98 Museum **1** 38 Format memory card 17, 98 Formatting internal memory 98 Ν **FSCN 110** Nickel-metal hydride batteries 12 Full-frame playback mode 24, 25 Night landscape 437 Night Portrait 2 35 Н Nikon Transfer 2 57, 58, 61 Halfway 11 Number of Exposures Remaining 18, 73 Help 11 0 I Optical zoom 21 Identifier 110 Optional Accessories 108 Image mode 19, 33, 72 Image review 90 Incandescent 74 Panorama assist # 40, 42 Indicator lamp 5 Panorama Maker 5 57, 61 Internal memory 16 Paper size 64, 65 ISO sensitivity 29 Party/indoor X 36

Photo info 90

PictBridge 62, 126 Playback 24, 25, 46, 48, 55 Playback button 5, 8 Playback menu 79 Playback zoom 48 Portrait **2** 34 Power 12, 14, 18 Power switch 4, 12, 18 Power-on lamp 12, 18 Preset manual 75 Print 64, 65, 68 Print set 68 Print Set (Date) 69 Printer 62 Protect 104 R Recording movies 53 Red-eve reduction 28, 29 Reset all 101 Rotate image 105 **RSCN 110** S Scene mode 33, 34 Self-timer 30 Self-timer lamp 4, 30 Sepia 77 Setup menu 83 Shooting 18, 20, 22 Shootina Menu 70 Shooting mode button 5, 8 Shooting-mode Selection menu 8 Shutter sound 96 Shutter speed 22 Shutter-release button 4, 22 Sinale 76 Sleep Mode 97 Slide show 81 Slow Svnc 28 Small picture 51

Small size 54
Smart Portrait Mode 44
Sound settings 96
Speaker 4
Sports ❖ 35
SSCN 110
Standard color 77
Strap 11
Sunset ≝ 36

Ţ

Tabs 10
The ▶ (Playback) Button 8
Thumbnail playback 46
Time zone 14, 87, 89
Tripod socket 5
TV 56
TV movie 54

U

USB cable 58 USB connector and audio/video output 5, 56, 63 USB/audio/video output connector 57, 58

<u>V</u>

Video Mode 99 ViewNX 2 57, 61 Vivid color 77 Volume 55

W

Welcome screen 86 White balance 74

Ζ

Zoom button 4, 55



No reproduction in any form of this manual, in whole or in part (except for brief quotation in critical articles or reviews), may be made without written authorization from NIKON CORPORATION.

